


LEG MOUNT FITTING INSTRUCTION

The design of the Tracklander with its adjustable legs, gives it considerable flexibility and strength. Although the initial set up is longer, it is very easy to fit and remove once this is done. The Tracklander Roof Rack can be fitted to many types of vehicles by simply changing the Leg Mounts to suit. Please read these instructions carefully to make the Roof Rack fit up, as quick and simple as possible.

VEHICLE MAKE: VEHICLE WITH GUTTERS	MODEL/YEAR SEE VEHICLE TYPES DEPICTED ON PAGE 2	FOR KIT 1,2,4,5,6,7,8,12,13,15,16, 17,18,19,23,24,26,27,28
--	---	--

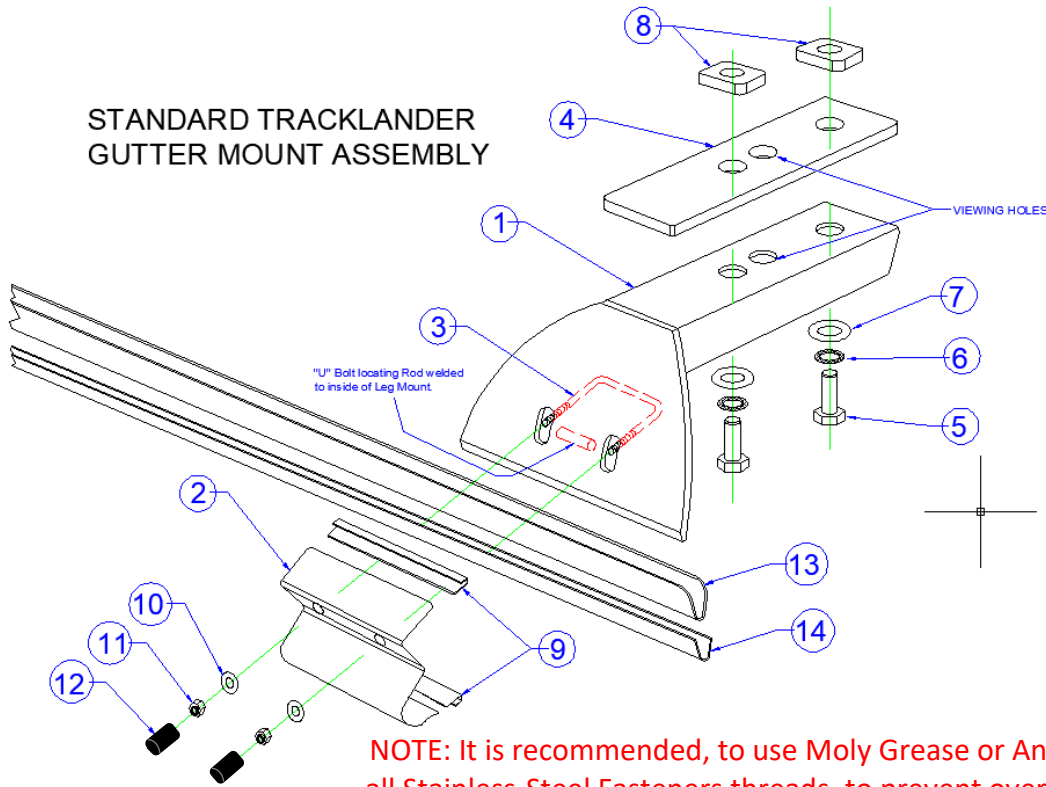

NOTE: It is recommended, to use Moly Grease or Anti Seize Lubricant on all Stainless-Steel Fasteners threads, to prevent overheating and binding.

PARTS LIST (FOR TRACKLANDER ROOF RACK WITH 8 x LEG MOUNTS)

DESCRIPTION	QTY.	DESCRIPTION	QTY.	NOTES
1) Leg Mount (see page 2)	8	7) M10 Flat Washer	16	Refer to Chart on page (2), for details on your specific vehicle, including: Leg Mount size, Gutter Width and number of Leg Spacers required. NOTE: This Parts List applies to a TLR Roof Rack with 8 Leg Mounts. If vehicle has 6 or 4 legs, the parts will be proportionately less.
2) Gutter Clamp	8	8) M10 Strut Nut	16	
3) Threaded "U" Bolt.	8	9) Clamp - Channel Nylon	16	
4) Leg Spacer (see page 2)	Varies	10) M6 Flat Washer	16	
5) M10x25 Hex Bolt	16	11) M6 Nyloc Nut	16	
5A) NOTE: M10x30 Hex Bolt (when using leg spacer)		12) M6 PVC Black Cap	16	
6) M10 Star Washer	16	13) FLGS (Full Gutter Support)	2	
		14) Full Gutter Support Nylon.	2	

IMPORTANT: This information is protected by Copyright and no part of this drawing may be shown, lent, reproduced, or transmitted in any form or by any means electronic or mechanical including photocopying, recording or by any information storage or retrieval system, without written permission from the Copyright holder, Jaram Australia. All legal rights reserved. Tracklander is a holder of several Registered Designs and Patents covering its product range. Any breach will result in immediate LEGAL action.



LEG MOUNT FITTING INSTRUCTION

VEHICLE SPECIFIC- ROOF RACK LEG MOUNT SET-UP GUIDE

VEHICLE MAKE AND MODEL	FULL LENGTH MODEL NUMBER	¾ LENGTH MODEL NUMBER	½ LENGTH MODEL NUMBER	LEG MOUNT	GUTTER WIDTH FOR SET-UP "A" IS REAR OF RACK	EXTRA INFORMATION
FORD MAVERICK AND NISSAN PATROL GQ	TLR AL22 TLR AL22FT TLR AL22OE	TLR AL18 TLR AL18FT TLR AL18OE	TLR AL14 TLR AL14FT TLR AL14OE	TLR-125	A B C D 1360 1360 1360 1360	NO SPACER REQUIRED
NISSAN PATROL GU (1998 on)	TLR AL22 TLR AL22FT TLR AL22OE	TLR AL18 TLR AL18FT TLR AL18OE	TLR AL14 TLR AL14FT TLR AL14OE	TLR-100 GU (Special Clamp Shape for GU Gutter Profile)	A B C D 1295 1300 1300 1310	6mm LEG SPACER FRONT AND REAR
JEEP CHEROKEE	TLR AL18 TLR AL18FT TLR AL18OE	TLR AL14 TLR AL14FT TLR AL14OE		TLR-125	A B C D 1330 1335 1340 1345	6mm LEG SPACER FRONT AND REAR
HOLDEN JACKAROO (TO 1992)	TLR AL22 TLR AL22FT TLR AL22OE	TLR AL18 TLR AL18FT TLR AL18OE	TLR AL14 TLR AL14FT TLR AL14OE	TLR-125	A B C D 1330 1330 1330 1330	NO SPACER REQUIRED
MIITSUBISHI PAJERO SWB LOW ROOF (TO 1991)	TLR AL18 TLR AL18FT TLR AL18OE	TLR AL14 TLR AL14FT TLR AL14OE		TLR-125	A B C 1270 1275 1280	CHECK HEIGHT OF ROOF BEFORE ORDERING
MIITSUBISHI PAJERO SWB HIGH ROOF (TO 1991)	TLR AL22 TLR AL22FT TLR AL22OE	TLR AL18 TLR AL18FT TLR AL18OE	TLR AL14 TLR AL14FT TLR AL14OE	TLR-250	A B C D 1270 1275 1275 1280	CHECK HEIGHT OF ROOF BEFORE ORDERING
MIITSUBISHI PAJERO 92-99 LWB	TLR AL22 TLR AL22FT TLR AL22OE	TLR AL18 TLR AL18FT TLR AL18OE	TLR AL14 TLR AL14FT TLR AL14OE	TLR-165	A B C D 1275 1280 1280 1300	6mm LEG SPACER FRONT AND REAR
LAND ROVER DEFENDER – (STANDARD FLAT TOP ROOF) Full Length 2.8m – Special Order.	TLR AL28 (*MTO) TLR AL28FT (*MTO) TLR AL28OE (*MTO)	TLR AL22 TLR AL22FT TLR AL22OE	TLR AL18 TLR AL18FT TLR AL18OE	TLR-210	A B C D 1466 1466 1466 1466	NO SPACER REQUIRED
LAND ROVER DEFENDER – (CORRUGATED ROOF TOP) Full Length 2.8m – Special Order.	TLR AL28 (*MTO) TLR AL28FT (*MTO) TLR AL28OE (*MTO)	TLR AL22 TLR AL22FT TLR AL22OE	TLR AL18 TLR AL18FT TLR AL18OE	TLR-250	A B C D 1466 1466 1466 1466	NO SPACER REQUIRED
LAND ROVER DISCOVERY (1993-2004)	TLR AL18 TLR AL18FT TLR AL18OE	TLR AL14 TLR AL14FT TLR AL14OE		TLR-250 TLR-280	A B C 1490 1490 1490 6mm LEG SPACER FRONT AND REAR	NO ROOF RAILS - WITH ROOF RAILS
RANGE ROVER (1977 -1993)	TLR AL18W (*MTO)			TLR-125	A B C 1490 1480 1480	12mm LEG SPACER REAR LEGS, 6mm LEG SPACER, CENTRE AND FRONT
SUZUKI JIMNY (2019 on)	TLR AL18 TLR AL18FT TLR AL18OE	TLR AL14 TLR AL14FT TLR AL14OE		TLR-125	A B C 1305 1325 1325	NO SPACER REQUIRED (FLGS 1650mm)
TOYOTA LANDCRUISER 60 SERIES WAGON	TLR AL22 TLR AL22FT TLR AL22OE	TLR AL18 TLR AL18FT TLR AL18OE	TLR AL14 TLR AL14FT TLR AL14OE	TLR-125	A B C D 1370 1385 1385 1385	6mm LEG SPACER FRONT AND REAR
TOYOTA LANDCRUISER 60 SERIES SAHARA HIGH ROOF	TLR AL22 TLR AL22FT TLR AL22OE	TLR AL18 TLR AL18FT TLR AL18OE	TLR AL14 TLR AL14FT TLR AL14OE	TLR-210	A B C D 1370 1385 1385 1385	6mm LEG SPACER FRONT AND REAR
TOYOTA LANDCRUISER 70 SERIES WAGON	TLR AL22 TLR AL22FT TLR AL22OE	TLR AL18 TLR AL18FT TLR AL18OE	TLR AL14 TLR AL14FT TLR AL14OE	TLR-125	A B C D 1375 1375 1375 1375	NO LEG HEIGHT SPACER REQUIRED
TOYOTA LANDCRUISER 75/78/70 SERIES TROOP CARRIER Full Length 2.8m – Special Order.	TLR AL28 (*MTO) TLR AL28FT (*MTO) TLR AL28OE (*MTO)	TLR AL22 TLR AL22FT TLR AL22OE	TLR AL18 TLR AL18FT TLR AL18OE	TLR-210	A B C D 1450 1450 1450 1450	NO SPACER REQUIRED
TOYOTA LANDCRUISER 80 SERIES WAGON	TLR AL22 TLR AL22FT TLR AL22OE	TLR AL18 TLR AL18FT TLR AL18OE	TLR AL14 TLR AL14FT TLR AL14OE	TLR-125	A B C D 1315 1320 1320 1325	6mm LEG SPACER FRONT AND REAR
TOYOTA LANDCRUISER PRADO 90 SERIES WAGON (1996-2003)	TLR AL22 TLR AL22FT TLR AL22OE	TLR AL18 TLR AL18FT TLR AL18OE	TLR AL14 TLR AL14FT TLR AL14OE	TLR-125	A B C D 1260 1268 1276 1285	6mm LEG SPACER FRONT AND REAR

*MTO: Made to Order - Extra Large Roof Rack.

NOTE: "A" LEG MOUNT POSITION IS AT REAR OF RACK.

NOTE: TRACKLANDER ROOF RACKS WILL ALSO FIT A WIDE RANGE OF VANS AND WAGONS.

SEE THE TRACKLANDER WEBSITE tracklander.com.au FOR FURTHER INFORMATION.

IMPORTANT: This information and the product detailed within maybe protected by Copyright, Registered Design or Patent Protection.



4WD ROOF RACKS & ACCESSORIES

Tel: (08) 9451 0799

tracklander.com.au



Follow Us



© COPYRIGHT
10-6-2022

LEG MOUNT FITTING INSTRUCTION

NOTE: It is recommended, to use Moly Grease or Anti Seize Lubricant on all Stainless-Steel Fasteners threads, before tightening.

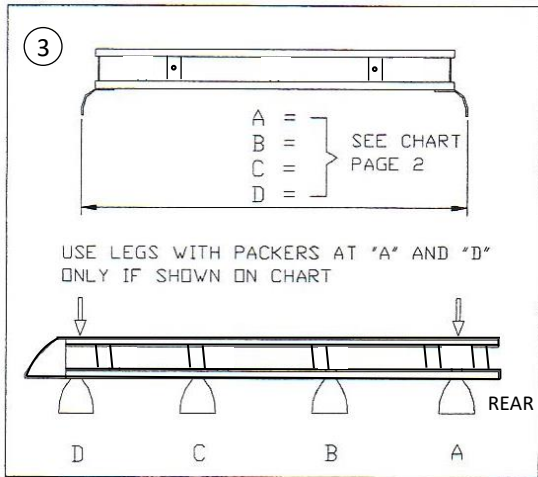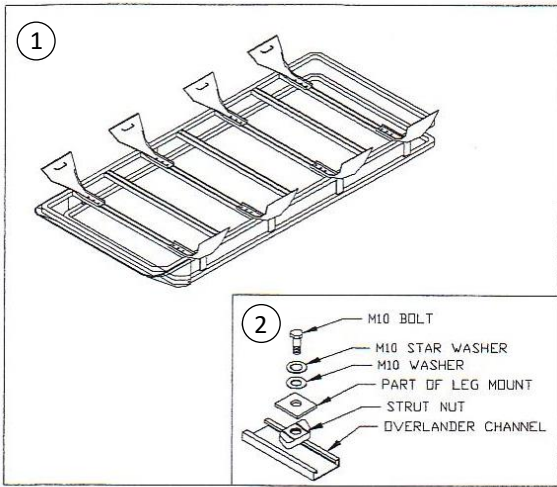

SETTING UP THE ROOF RACK

- 1) Place the Roof Rack upside down on bench or soft, non-abrasive surface.
- 2) Shows Strut Nut and Fastener Assembly. Position legs in correct channels and tighten to correct width to match Roof Gutters.



IMPORTANT: Ensure each Strut Nut is turned to 90° with the serrated grooves in the Strut Nut located in the return lips of the Channel Cross Bars. There is a viewing hole (no bolt) to check that the Strut Nut is rotated correctly. If it has not turned in correct position, insert a Screwdriver into the hole and turn Strut Nut.

- 3) Use the chart to set up the Roof Rack correctly and locate the Packers in correct position and tighten. Set and tighten Leg Mounts "A" and "D" first, then use a straight edge to line up the Centre Leg Mounts before tightening.

RE CHECK THE TIGHTNESS OF ALL FASTENERS.

NOTE: The "U" Shaped Nylon should be fitted to the top and bottom edge of each Gutter Clamp as shown in exploded diagram on page 1.

- 4.) Press Nylon Channel onto bottom of Full-Length Gutter Support and position in Gutter of vehicle with long edge against vehicle Roof and short edge facing out. See diagram (4a).

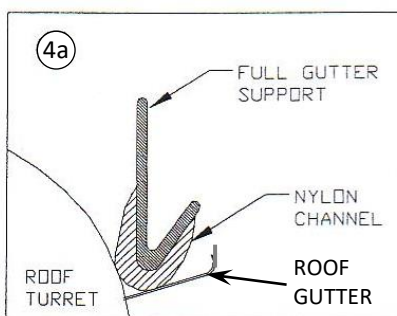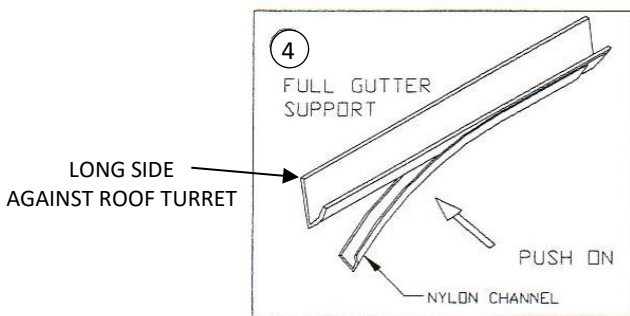


IMPORTANT: This information and the product detailed within maybe protected by Copyright, Registered Design or Patent Protection.

4WD ROOF RACKS & ACCESSORIES




LEG MOUNT FITTING INSTRUCTION

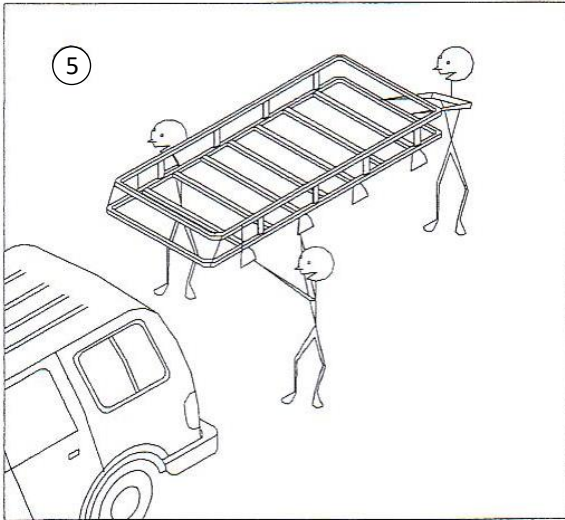

5) The Roof Rack may be lifted on by two people, one on each side. However it is best to have a third person at the rear. Both people at the side should push the Roof Rack towards each other for easy lifting. **NOTE: Lift by the bottom edge of the leg mounts.**


Lower Roof Rack gently into the Full Length Gutter Support and tighten Clamps.

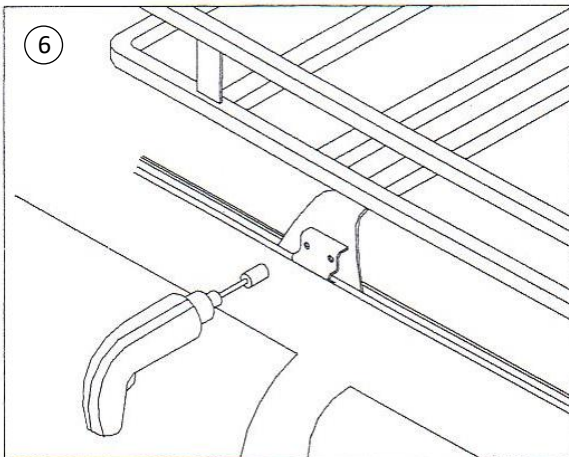

This is best done using an M10 socket and a Cordless Drill. **Adjust Torque Setting to prevent overtightening of clamps.**

The clamps should be tightened firmly, but not deformed.

CHECK THE TIGHTNESS OF ALL FASTENERS AGAIN.

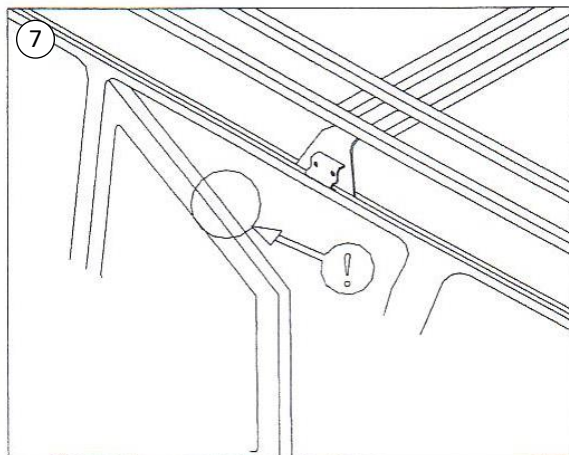

IMPORTANT: Ensure the door seals at the top of the door do not catch on the clamp when fitting. If they do, ensure the clamps are sitting flat against the underside of the surface, and tighten until the door seals clear.

Tracklander 4WD Roof Racks accepts no responsibility for the damage of door seals, as correct fitting will ensure door seals are not affected.

NOTE: On some vehicles the doors can be adjusted, by loosening the hinge bolts and lowering the Door Catch. Check tracklander.com.au website for further information.

IMPORTANT: This information and the product detailed within maybe protected by Copyright, Registered Design or Patent Protection.



LEG MOUNT FITTING INSTRUCTION

8) Your Tracklander Roof rack is now ready for use.

9) Leave fitting instructions in Vehicle Glove Box or give to Vehicle Owner.

10) CHECK TIGHTNESS OF BOLTS BEFORE AND AFTER TRAVELLING OVER ROUGH TERRAIN.

NOTE: Nyloc clamp nuts are easily tightened using a M10 socket "¼" Drive and Cordless Drill.

**CLEAN THE ROOF RACK WITH A MILD DETERGENT (Car wash detergent) AND WATER.
DO NOT USE SOLVENT OR ABRASIVES.**

PLEASE NOTE:

For specific vehicle Roof top carrying capacity, refer to Vehicle Owner's Manual.

REMOVAL OF RACK

- When removing Leg Mounts and Components, Use Spray Lubricant on thread and allow to penetrate between the thread, before loosening.
- Remove Nyloc Nut slowly, to prevent thread overheating and binding.

IMPORTANT: This information and the product detailed within maybe protected by Copyright, Registered Design or Patent Protection.

