
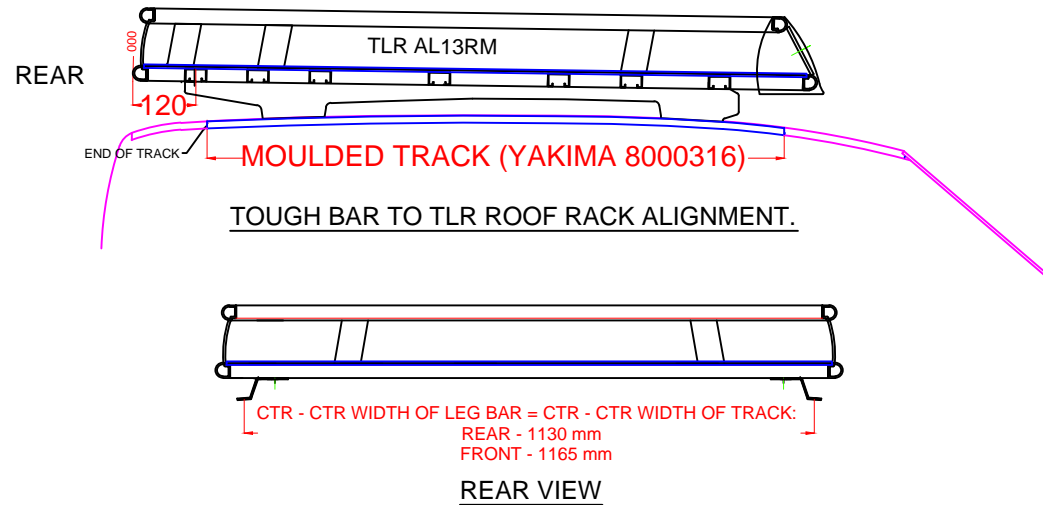


LB53M FITTING INSTRUCTIONS

YAKIMA MOULDED TRACK MOUNT

PX FORD RANGER DUAL CAB TOUGH BAR - TLR 13RM & TLR14 ROOF RACKS.

NOTE: PX RANGER WILD TRACK HAS SPECIFIC FITTING INSTRUCTIONS & FRONT COVER PLATES - PLEASE REFER TO [LBKIT53WT](#).

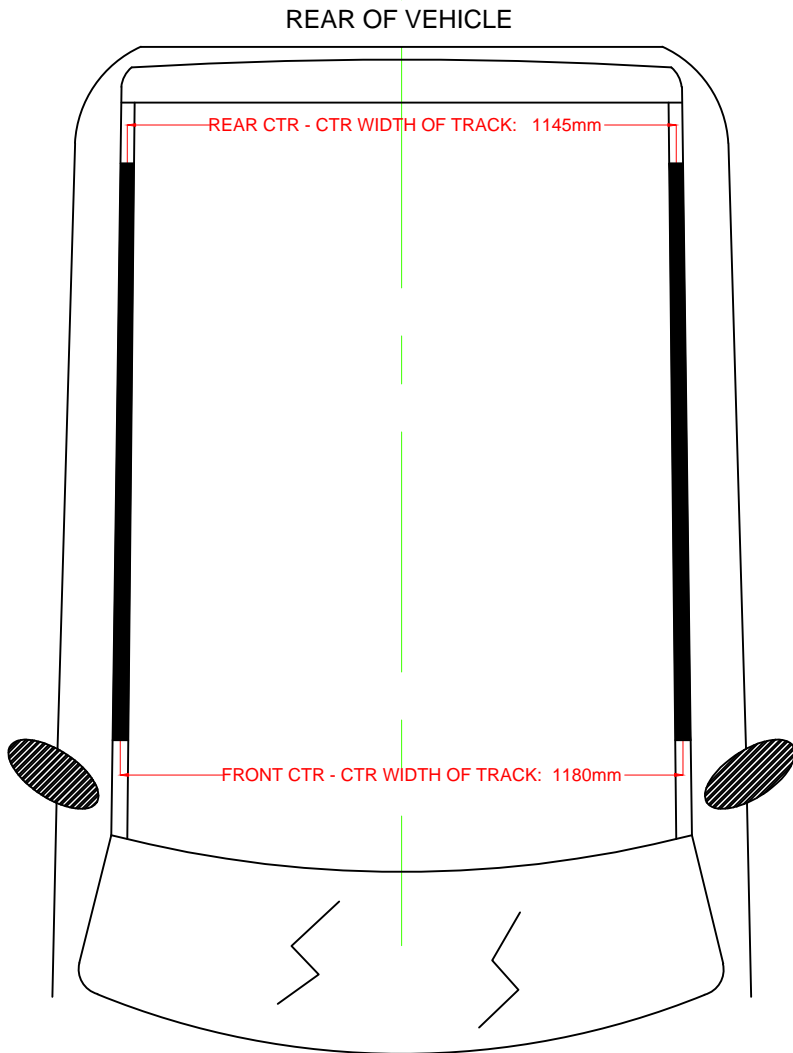

1. Fit Tracks in Channel on Roof Top as per Fitting Instructions.
 2. Measure the Centre to Centre width of the Tracks at the REAR and record the measurement.
 3. Measure the Centre to Centre width of the Tracks at the FRONT and record the measurement.
 4. With the TLR Roof Rack upside down, position Tough Bars on the specific Channels, as shown.
 5. Secure with M10 x 25 Hex. Set Screw, Star Washer, Flat Washer and Channel Nut.
 6. Move the Tough Bars evenly both sides of Centreline to the Centre's of the Roof Tracks as shown.
- NOTE: Tough Bars must be equal distance from both sides of Roof Rack - Front and Rear.**
7. Tighten fasteners firmly to secure Tough Bars to Roof Rack.
 8. With a person either side of the Roof Rack, carry the Roof Rack over the rear of the vehicle and lower it gently on the Roof Tracks.
- NOTE: Rear of Roof Rack to be approx. 30mm - 50mm from rear edge of roof.**
9. Fit the Threaded Insert Plates (2 in each Track) or Brass Hex Nuts (4 in each Track) into the Tracks .
 10. Fit the M6x16 But. Soc. Screws with Star Washers and Flat Washer through Tough Bar Foot and thread into the Threaded Insert Plates in Track.
 11. Raise the rear Tailgate, check clearance from Roof Rack and tighten all Fasteners firmly.

NOTE: Check all Roof Rack and Tough Bar Fasteners regularly, especially after traveling over unsealed roads and rough terrain. © JARAM AUSTRALIA 1-7-2016 **UPDATED: 8-3-2021 LMc.**