
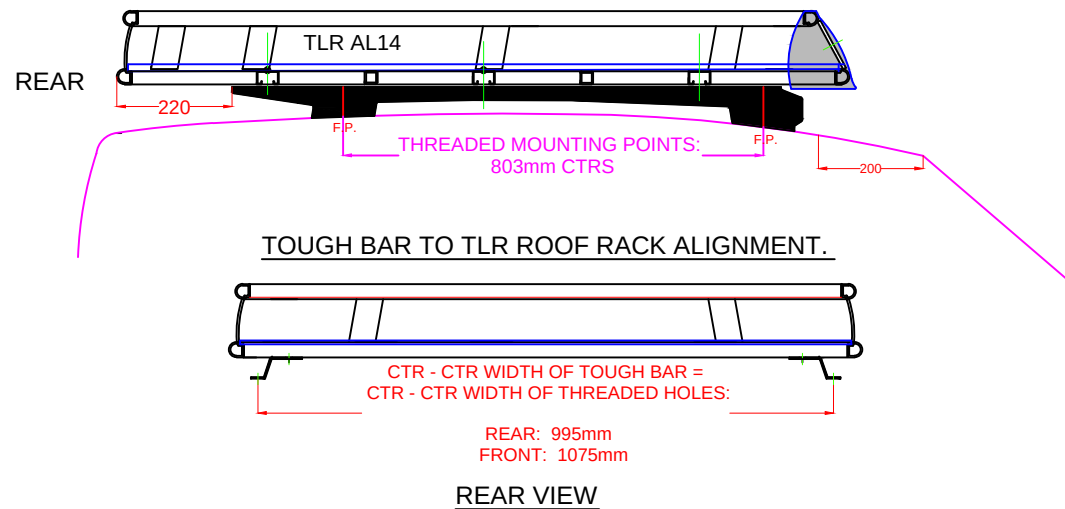


LB 140 - FITTING INSTRUCTIONS

ROOF CHANNEL THREADED MOUNTING POINTS

MN-MR TRITON DUAL CAB TOUGH BAR - TLR 13RM & TLR14 ROOF RACKS.

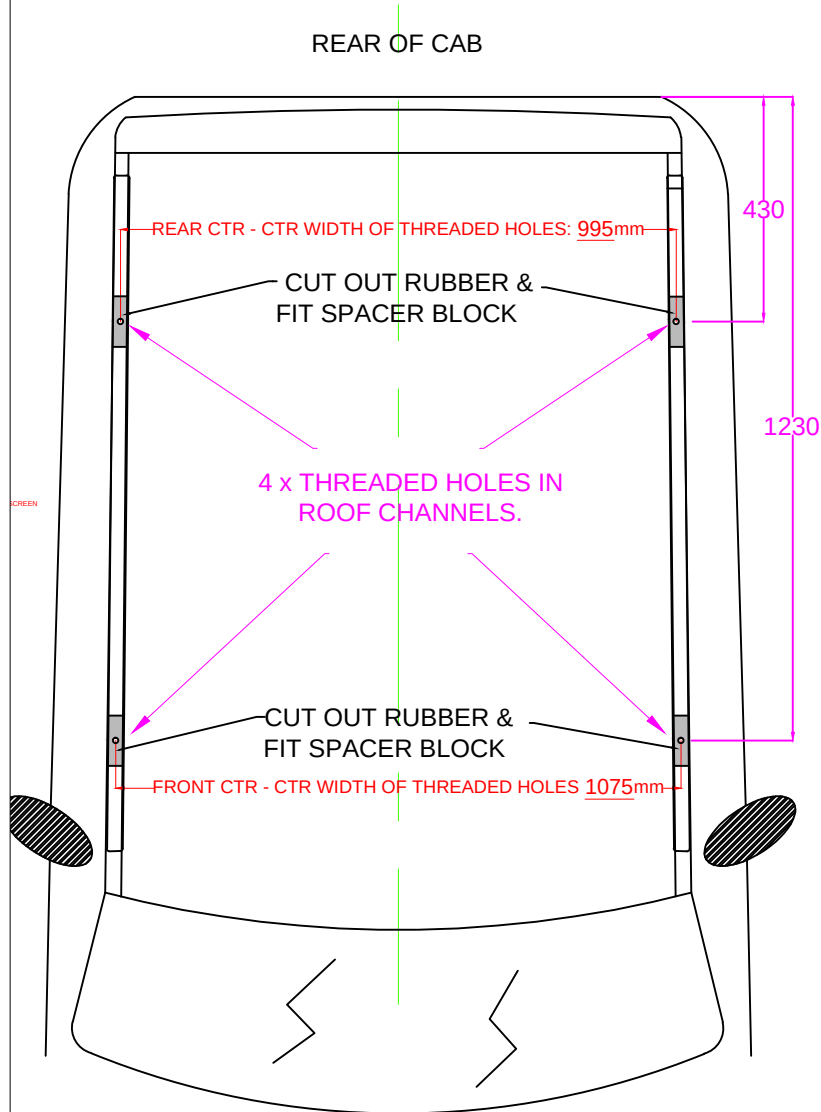

1. Carefully lift Moulded Rubber out of Roof -Top Channels at approx. 430mm & 1230mm from Rear of Cab.
2. Cut out the "Notched Out" (100mm) sections of the Rubber Moulding and refit Rubber Moulding in Roof Channel.
3. Fit LB140SB Spacer Blocks central over each Threaded Hole in the gap in Rubber Mouldings.
2. Measure the Centre to Centre width of the Threaded Holes at the REAR and record the measurement.
3. Measure the Centre to Centre width of the Threaded Holes at the FRONT and record the measurement.
4. With the TLR Roof Rack upside down, position Tough Bars on the specific Mounting Channels, as shown.
5. Secure with M10 x 25 Hex. Set Screw, Star Washer, Flat Washer and Channel Nut.
6. Move the Tough Bars evenly both sides of Centreline to the Centre's of the Threaded Holes, as shown.

NOTE: Tough Bars must be equal distance from both sides of Roof Rack - Front and Rear.

7. Tighten fasteners firmly to secure Tough Bars to Roof Rack.
8. With a person either side of the Roof Rack, carry the Roof Rack over the rear of the vehicle and lower it gently over the Roof Channel Threaded Holes.
- NOTE: Rear of Roof Rack to be approx. 30mm from rear of Cab Roof.**
10. Fit the M8x25 Soc. Cap Screws with Star Washers and Flat Washer through Tough Bar Foot Plate, Spacer Block and into the existing Threaded Holes.
11. Check the position of Roof Rack and tighten all Fasteners firmly.

NOTE: Check all Roof Rack and Tough Bar Fasteners regularly, especially after traveling over unsealed roads and rough terrain.