



FITTING INSTRUCTIONS - EXISTING ROOF RAIL MOUNTING POINTS IN ROOFTOP CHANNEL **FORD EVEREST WAGON (LB143-03) TOUGH BAR - TLR22,TLR21RM & DREAM RIDER ROOF RACKS.**

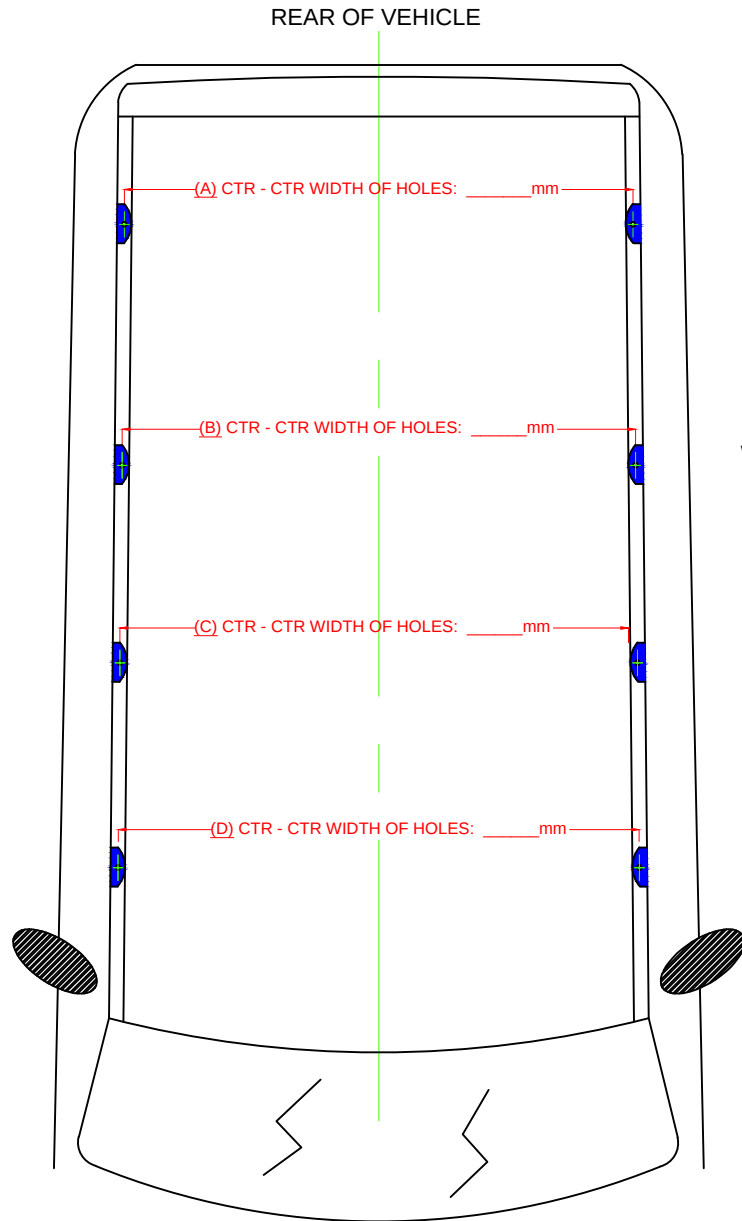

© JARAM AUSTRALIA 20-8-2021

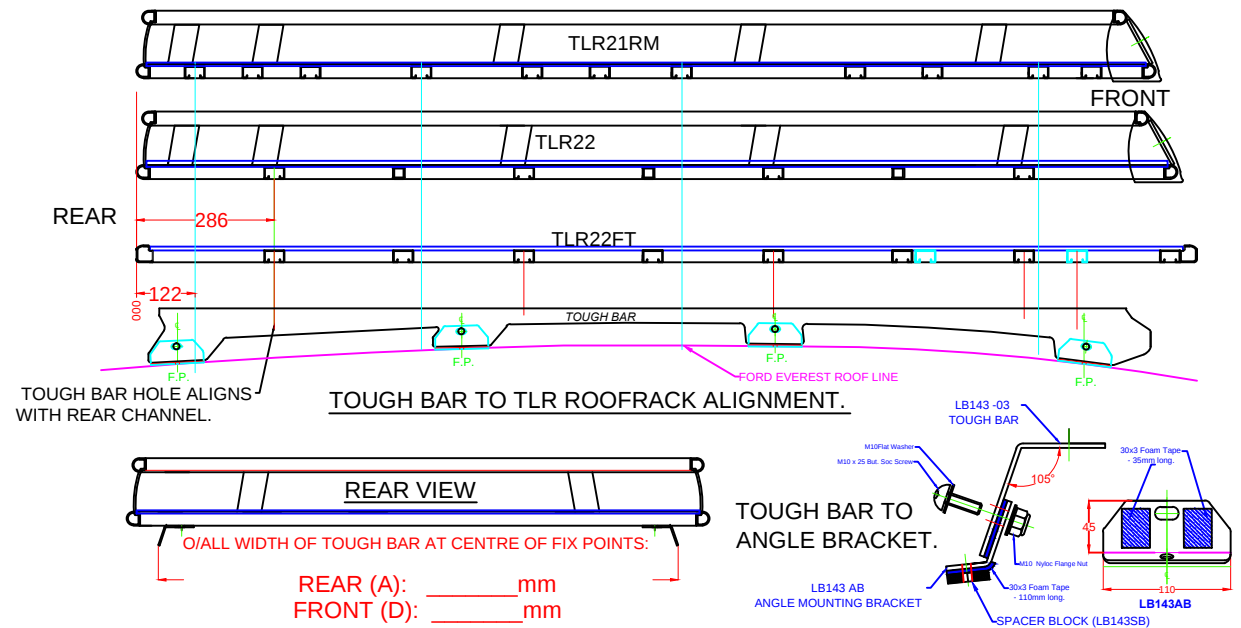

1. Lower Hood Lining to gain access to Roof Flush Rail Mounting Hex Nuts (see photo Fit Instruction).
2. Remove the Hex Nuts, underside of Roof and remove Flush Roof Rails.
3. Make sure roof top is cleaned with Wax & Grease remover, around each Mount Point Hole.
4. Seal in and around the holes with Silicone Sealant and fit the Black Nylon Spacer Blocks over the holes.
5. Fit the 8 x Angle Mounting Brackets on top of the Spacer Blocks, align Holes and Angle Brackets, then secure with M6x25 But. Soc. Screws with Flat Washer on top and Flat Washer & M6 Nyloc Nut on the inside.
6. Measure the O/All width of the REAR Hole Centres on vehicle Roof-Top and record the measurement. (Less 10mm = the O/All Tough Bar Width at the REAR Mounting Point)
7. Measure the Centre to Centre width of the FRONT Hole Centres on vehicle Roof-Top and record the measurement. (Less 10mm = the O/All Tough Bar Width at the FRONT Mounting Point)
8. With the TLR Roof Rack upside down, position Tough Bars on the specific Channels, as shown.
9. Secure with M10 x 25 Hex. Set Screw, Star Washer, Flat Washer and Channel Nut.
10. Move the Tough Bars evenly both sides of Centre Line to the O/All of the Tough Bar, as shown.

NOTE: Tough Bars must be equal distance from both sides of Roof Rack - Front and Rear.

11. Tighten fasteners firmly to secure Tough Bars to Roof Rack.
12. With a person either side of the Roof Rack, carry the Roof Rack over the rear of the vehicle and lower it gently over the outside of the Angle Mounting Brackets and align the Hole Centres. (Check centre mounting points and adjust width of Tough Bar if necessary).
13. Fit the M10x25 Soc. Cap Screws with Flat Washer through Tough Bar and Angle Bracket.
14. Fit Nyloc Flange Nut to inside of Tough Bar.
15. Raise the rear Tailgate, check clearance from Roof Rack and tighten all Fasteners firmly.
16. Pour a cup of water around each Roof Mount Angle Bracket and check for any water leakage inside vehicle.
17. Replace Hood Lining.

NOTE: Check all Roof Rack and Tough Bar Fasteners regularly, especially after traveling over unsealed roads and rough terrain.