
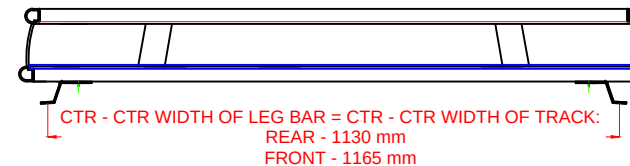
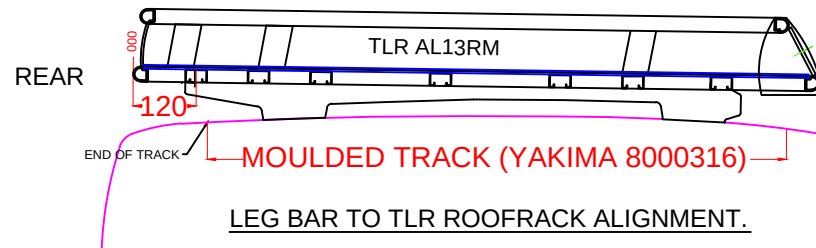


LB53M FITTING INSTRUCTIONS

MOULDED TRACK MOUNT (BRASS HEX NUTS)

PX FORD RANGER DUAL CAB LEG BAR - TLR 13RM & TLR14 ROOF RACKS.

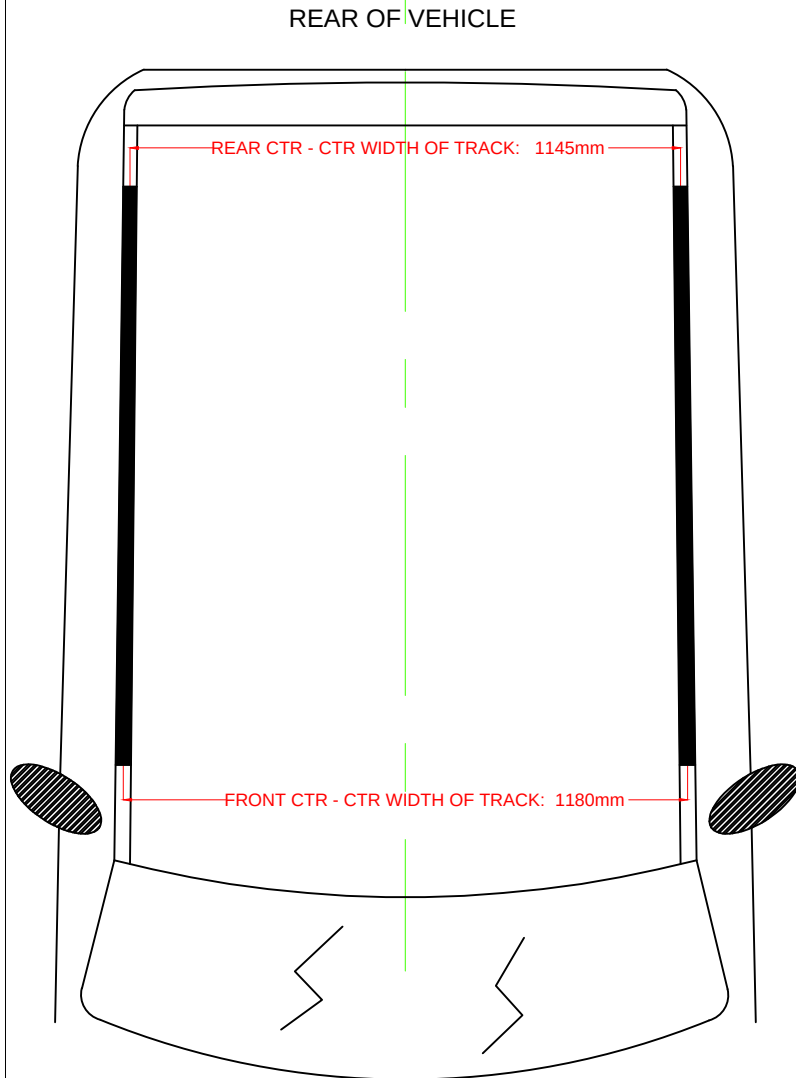

REAR VIEW

1. Fit Tracks in Channel on Roof Top as per Fitting Instructions.
2. Measure the Centre to Centre width of the Tracks at the REAR and record the measurement.
3. Measure the Centre to Centre width of the Tracks at the FRONT and record the measurement.
4. With the TLR Roof Rack upside down, position Leg Bars on the specific Channels, as shown.
5. Secure with M10 x 25 Hex. Set Screw, Star Washer, Flat Washer and Channel Nut.
6. Move the Leg Bars evenly both sides of Centreline to the Centre's of the Roof Tracks as shown.

NOTE: Leg Bars must be equal distance from both sides of Roof Rack - Front and Rear.

7. Tighten fasteners firmly to secure Leg Bars to Roof Rack.
8. With a person either side of the Roof Rack, carry the Roof Rack over the rear of the vehicle and lower it gently on the Roof Tracks.

NOTE: Rear of Roof Rack to be approx. 30mm - 50mm from rear edge of roof.

9. Fit the Brass Nuts into the Tracks (6 in each Track).
10. Fit the M6x16 But. Soc. Screws with Star Washers and Flat Washer through Leg Bar Foot and thread into Brass Hex Nuts in Track.
11. Raise the rear Tailgate, check clearance from Roof Rack and tighten all Fasteners firmly.

NOTE: Check all Roof Rack and Leg Bar Fasteners regularly, especially after traveling over unsealed roads and rough terrain. © JARAM AUSTRALIA 1-7-2016 UPDATED: 29-8-2019 LMc.