


HOLDEN COLORADO 7 WAGON

TRACKLANDER FITTING INSTRUCTIONS- TOUGH BAR RAIL MOUNT.

PARTS LIST	
QTY	DESCRIPTION
1	TLR AL18RM & TLRAL18 ROOF RACK
1	Pair - LB57-02 TOUGH BARS
8	M10 x 25 Hex Set Screws - SS
8	M10 Star Washers - SS
8	M10 Flat Washers – Z/P
8	M10 Channel Nuts – Z/P
12	M6 x 20 But. Soc. Head Screws - SS
12	M6 Star Washers - SS
12	¼ x ¾ Flat Washers - SS

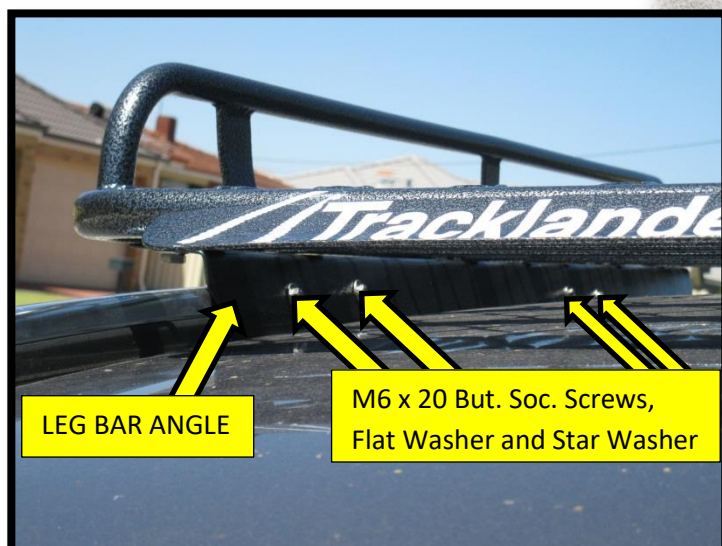

- Position Leg Bar Angles in line with M6 Threaded Holes on the inside of the Roof Rail

NOTE: Angle Cut end of Leg Bar goes towards the front.

- Secure Leg Bar Angles to the Threaded Holes, using M6 x 20 But. Soc. Screws, Star Washers and Flat washers.
- Fit all (12) But. Soc. Screws in Leg Bar and Roof Rail first, before tightening firmly.

- NOTE: When fitting a TLR18 Roof Rack to the Tough Bar, only use (6) M10x25 Hex. Head Set Screws, Star Washers, Flat Washers and Channel Nuts**



- Fit (8) M10 x 25 Hex Head Set Screws, with Star Washer and Flat washer to underside of Leg Bar through Ø12holes. Hold in place while fitting M10 Channel Nut to topside.
- Fit all (8) M10 Hex Set screws vertically to leg Bars.
- With a person on either side of the Roof Rack, lift the Roof Rack over the rear of the vehicle and align the Channel Nuts in the Leg Bars with the Channel Cross Members. **NOTE: The rearmost Channel Nut aligns with the 2nd Cross Member Channel from the rear of the Rack.**
- Centralise Rack on vehicle (centre of Rack in line with centre of Vehicle)
- Push M10 Hex Screw and Channel Nut upwards and rotate slowly to lock into Cross Member Channel.
- Tighten (8) M10 Hex Screws firmly.
- Check all fasteners are tight regularly, especially when travelling over rough terrain.