


VN FORD TRANSIT CUSTOM LWB VAN - TOUGH BAR

PART No: **LBKIT97 (V6)**

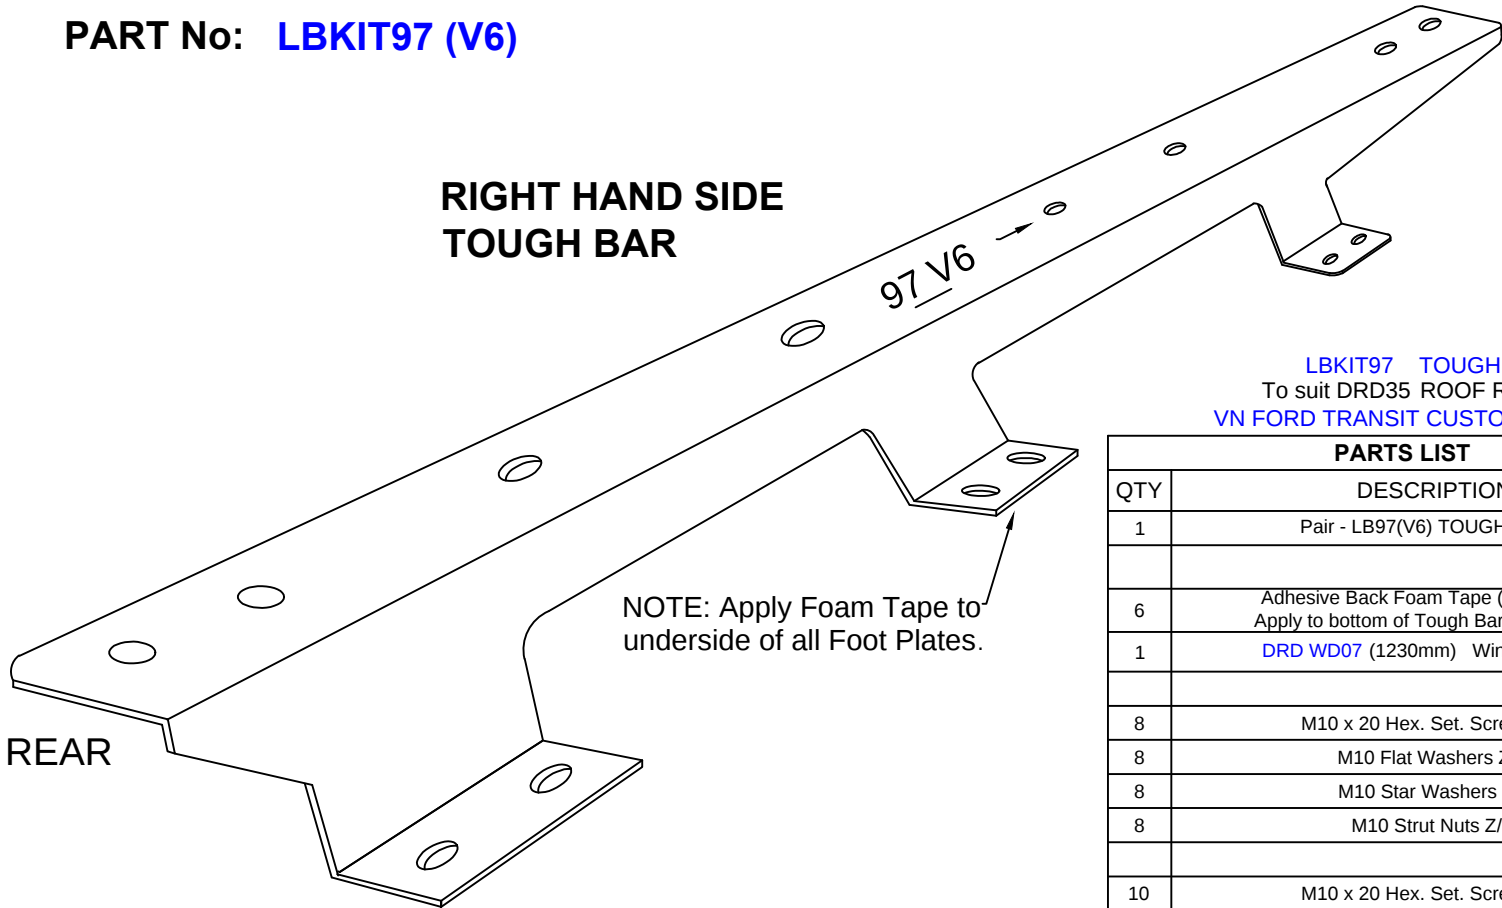

LBKIT97 TOUGH BAR
To suit DRD35 ROOF RACKS.
VN FORD TRANSIT CUSTOM LWB VAN

PARTS LIST	
QTY	DESCRIPTION
1	Pair - LB97(V6) TOUGH BARS
6	Adhesive Back Foam Tape (80 x 40 x 3) Apply to bottom of Tough Bar Foot Plates.
1	DRD WD07 (1230mm) Wind Deflector.
8	M10 x 20 Hex. Set. Screws SS
8	M10 Flat Washers Z/P
8	M10 Star Washers SS
8	M10 Strut Nuts Z/P
10	M10 x 20 Hex. Set. Screws SS
10	M10 Flat Washers Z/P
10	M10 Star Washers SS
10	M10 Strut Nuts Z/P
12	Use Existing Fasteners (M8x20 But. Soc. Screws) removed from Threaded Holes in Roof Top .
12	$\frac{5}{16} \times \frac{3}{4}$ Flat Washers SS

DRDWD10 (1580mm)
Wide Roof Rack

DRD35L ROOF RACK
TO TOUGH BAR.

OR

DRD35 ROOF RACK
TO TOUGH BAR.

TOUGH BAR TO
EXISTING THREADED
HOLES IN ROOF TOP.

- Remove existing Fasteners and Factory Load Bars from Roof Top.
- NOTE:** Apply Silicone Sealant to theaded Holes in Roof Top before fitting Tough Bar and Fasteners.
- Fit Tough Bar to Roof Top using existing Fasteners.
- Fit Dream Rider Roof Rack to Tough Bars and tighten all Fasteners firmly.