

ISUZU MU-X WAGON WITH FLUSH MOUNT ROOF RAILS (2020 on) TRACKLANDER (TLR18 & TLR18FT) & TOUGH BAR FITTING INSTRUCTIONS.



TLRAL18FT fitted to Isuzu MU-X Wagon with Flush Mount Roof Rails removed.

The TRACKLANDER ROOF RACK and TOUGH BAR mount to the existing Flush Rail Threaded Holes in the roof top of the ISUZU MU-X Wagon.

1



- Remove the 2 x Caps from top of Flush Rail.

2



- Remove the 2 x Socket Cap Screws from the top of the Flush Rail.

3



- Carefully prise up the corners, both ends of the Flush Rail to remove the End Caps.


4



- Remove the End Caps to expose the 2 x Hex Head Bolts (both ends).



- Remove the 2 x Hex Head Bolts, both ends of Flush Rail.

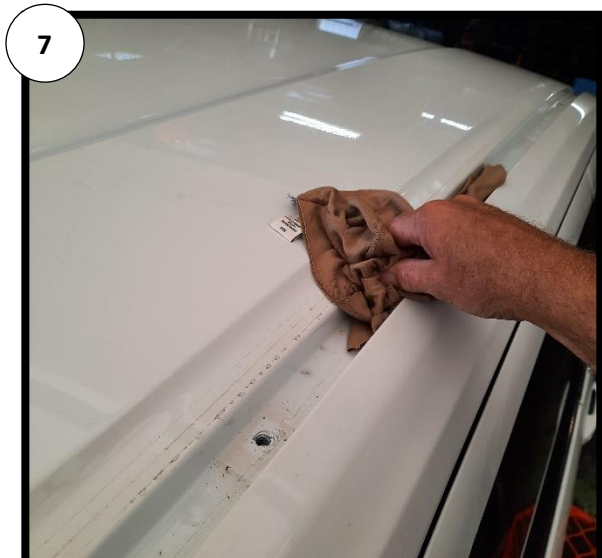

- Clean Roof Ditch thoroughly.



- Fit 8 x Black Spacer Blocks central over Threaded Holes, starting from the Rear (4 each side).

©COPYRIGHT. This information is protected by copyright and no part of this drawing may be shown, lent, reproduced or transmitted in any form or by any means, electronic or mechanical including photocopying, recording or by any information storage or retrieval system, without written permission from the copyright holder, **Jaram Products PTY**. All legal rights reserved. Any breach may result in immediate LEGAL action.



- Lift and remove the Flush Rail from both sides of vehicle.



- Seal in and around Holes with Silicone Sealant.
- Seal 2 x Front Holes at front of Roof Ditch (both sides) by fitting M8 x 20 But. Soc. Screws with Flat Washers and tightening firmly.



- Position the 8 x Angle Mounting Brackets central on Spacer Blocks, and secure with M8 x 40 But. Soc. Screws and Flat Washers (4 each side).

- With Roof Rack upside down, position the Tough Bars to the O/All width of Rear and Front Angle Mounting Brackets:
REAR: 1050mm (Overall width of Tough Bar, in line with Rear Side Mount Holes).
FRONT: 1080mm (Overall width of Tough Bar, in line with Front Side Mount Holes).
- Secure Tough Bars to Roof Rack Channels with M10 x 25 Hex Set Screws, Star Washers, Flat Washers & Strut Nuts.
- **NOTE: Tough Bars must be centralised on Roof Rack, i.e., equal from both sides.**
- Tighten firmly and check O/All width of Tough Bars, in line with Side Mount Holes (Rear & Front).

- With a person either side of the Roof Rack, lift the Roof Rack over the rear of vehicle and lower it carefully over the Angle Mounting Brackets, and align the Tough Bar and Angle Bracket holes.

11



- Fit the M10 x 25 But. Soc. Screws with Flat Washers through each Hole and secure with M10 Nyloc Flange Nuts on the inside of Angle Mounting Brackets.
- Tighten all (8) Fasteners firmly.

12



- **NOTE: Check tightness of all fasteners regularly, especially after travelling over rough terrain.**

13



TLRAL18FT FITTED TO ISUZU MU-X WAGON (2020 on)