




VW AMAROK DUAL CAB UTE TRACKLANDER (TLR13RM & TLR14) & TOUGH BAR FITTING INSTRUCTIONS.



The TLR13RM or TLR14 TRACKLANDER ROOF RACK and TOUGH BAR mounts to the existing Threaded Holes in the roof top of the VW Amarok Dual Cab Ute. These are located under the rectangular Caps, along the Plastic Strip, both sides of the rooftop.



- Remove the 4 x Plastic Caps along both sides of Roof Top and remove Screw Plugs from threaded holes, as shown.

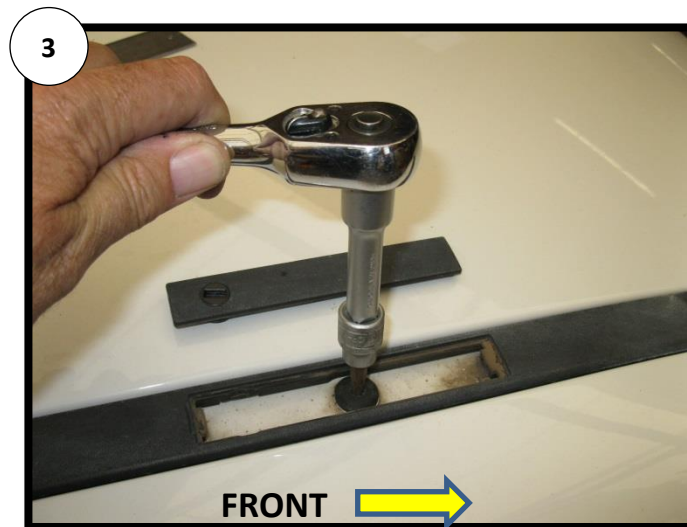

- Put Silicone Sealant in and around the edge of the Threaded Holes.
- Fit Spacer Blocks into the rectangular cavities, making sure the Holes line up.

VW AMAROK DUAL CAB UTE TRACKLANDER (TLR13RM & TLR14) FITTING INSTRUCTIONS.

5



- **NOTE: Position of Tough Bars – Arrow on Leg Bar faces forward.**
- Secure Tough Bar to Threaded Holes in Roof Top with M6 x 35 But. Soc. Screws, Star Washers and Flat Washers (Hand tighten only).
- Fit M10x25 Hex Head Set Screw with Star Washer and Flat Washer through Tough Bar and secure with Channel Nut on top side.

6



- Lift Tracklander over rear of Vehicle and position over Tough Bars.
- **NOTE: Channels must align with M10 Channel Nuts in top of Leg Bar. Adjust to suit.**
- Centralise Roof Rack, Left to Right. Measure to check.
- Tighten all Fasteners firmly.
- **NOTE: Check tightness of all fasteners regularly, especially after travelling over rough terrain.**

