


MITSUBISHI PAJERO SPORT WAGON (2018 on) TRACKLANDER (TLR18RM, TLR18FT & TLR18) FITTING INSTRUCTIONS.

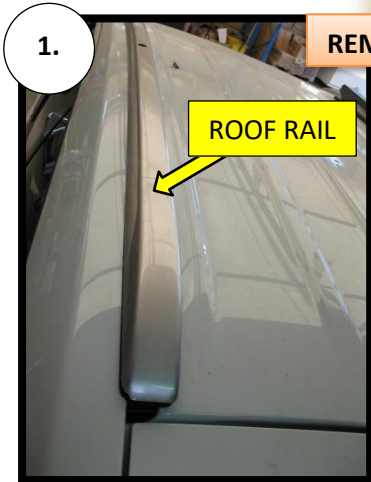


1.

REMOVAL OF FLUSH ROOF RAILS

Remove Centre Cap and Bolt from Roof Rail.

Remove Bolt at bottom of hole.

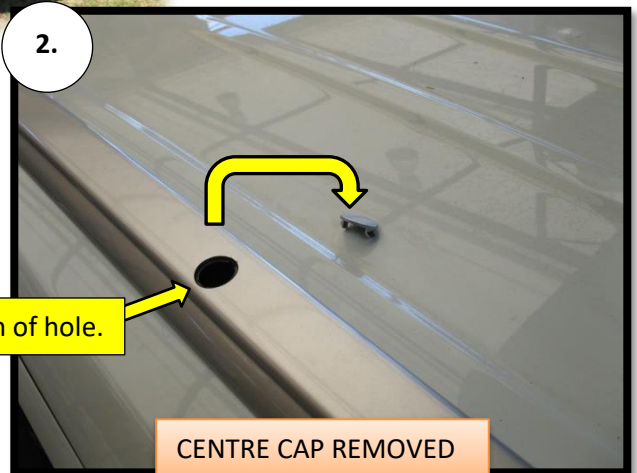

2.



3.

Carefully remove End Caps from Roof Rail.
WARNING: Use Rubber Block to lever against. Be careful not to damage Roof Top.




4.

Remove Set Screws from Roof Rail End Cap Base.



5.

End Cap and Screws removed from Roof Rail End Cap Base.

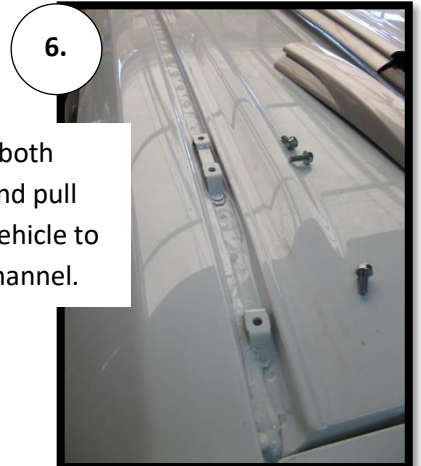

6.

Grasp Roof Rail with both hands firmly. Twist and pull towards outside of Vehicle to remove from Roof Channel.

MITSUBISHI PAJERO SPORT WAGON (2018 on) TRACKLANDER (TLR18RM.TLR18FT & TLR18) FITTING INSTRUCTIONS.

7

FITTING RUBBER MOULDINGS & SPACER BLOCKS.



Apply Double Sided Tape to bottom corners of Roof Ditch to secure Rubber Moulding in place.

8



Apply Silicone Sealant to Threads and top surface of Mounting Plates.

Push Rubber Moulding firmly into Roof Ditch. **NOTE: Lengths are cut to size to fit between mounting points. (See Parts List)**

REAR 135mm – 715mm – 715mm – 255mm FRONT


9.



Position Spacer Blocks over Mounting Plate Holes. Adjust position of Rubber Moulding to fit neatly between Spacer Blocks.

10.

REAR END PLATE

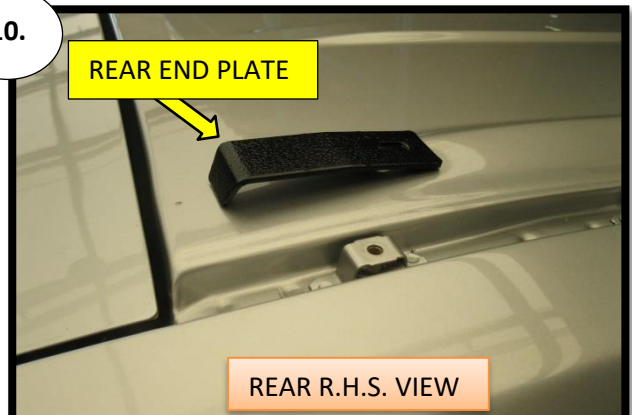


REAR R.H.S. VIEW

Position Rear- End Plate in Roof Channel and align holes. **Do not fit Fasteners yet.**

NOTE: Push Rear Cover Plate hard forward against body of Vehicle when tightening Fasteners to allow clearance from rear Lift -Up Door.

11.

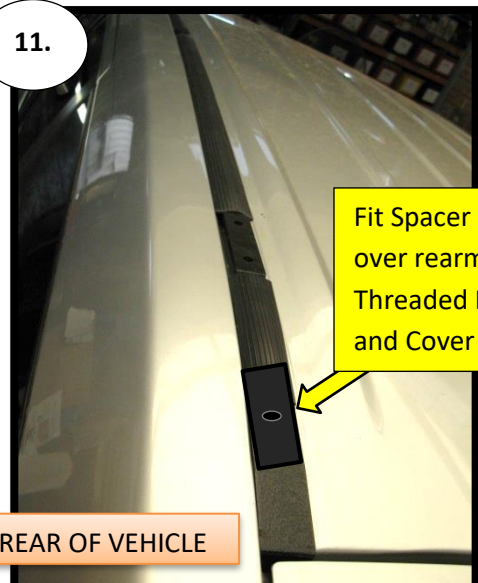

Fit Spacer Block over rearmost Threaded Hole and Cover Plate.

REAR OF VEHICLE

- Position Spacer Blocks over Holes and Rubber Mouldings in Roof Channels. **NOTE: Rear 60mm Spacer Block fits over the rearmost Hole on top of Rear Cover Plates.**

12.

FRONT END PLATE




- Position Front-End Plate over Hole and Rubber Moulding in Roof Channel. Secure with M6x20 But. Soc. Screw, Star Washer and Flat Washer. **NOTE: Finger tighten only, to hold Rubber Moulding Roof Channel.**

MITSUBISHI PAJERO SPORT WAGON (2018 on)

TRACKLANDER (TLR18RM, TLR18FT & TLR18) FITTING INSTRUCTIONS.

13.

FITTING TOUGH BAR & TRACKLANDER ROOF RACK.

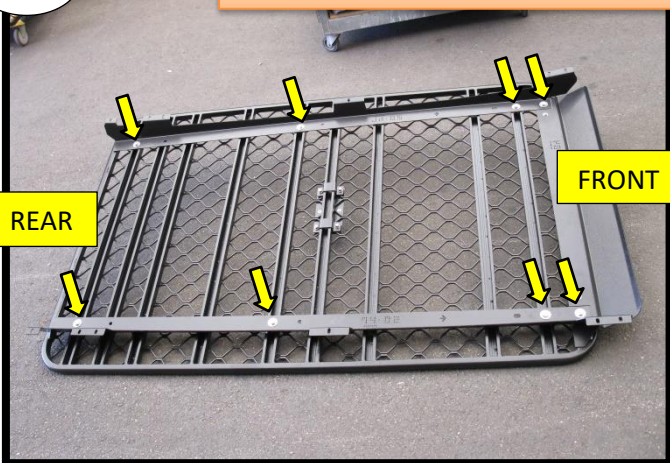

14.




- Fit Tough Bars to the Channel Cross Members with M10 Fasteners, to the specified Hole Centre widths (**REAR:** 1010mm - **FRONT:** 1070mm)
- Fit Front TLR Wind Deflector (TLRWD08) to Front Channel and secure firmly.

15.



16.

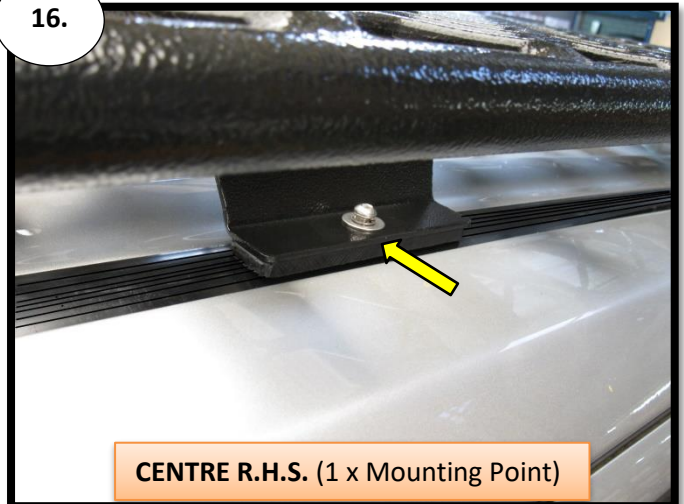

- With a person both sides, position Roof Rack on vehicle. Align Tough Bar Foot Plate holes, with holes in Roof Top Mounting Points and lower gently onto Spacer Blocks.
- Fit Fasteners (M6x25But. Soc. Screws, Star Washers and Flat Washers) in all Threaded Holes first, then tighten firmly.
- Check Rubber Buffer Pinch weld is in place on top front edge of Tough Bar.

17.



- Tighten Front End Plate Fasteners firmly.
- Check and tighten all Fasteners firmly.
- Regularly check that all fasteners are tight, especially after travelling over rough terrain

