




LB80 - FITTING INSTRUCTIONS

STANDARD TRACK MOUNT

D22 NISSAN NAVARA DUAL CAB TOUGH BAR - TLR 13RM & TLR14.

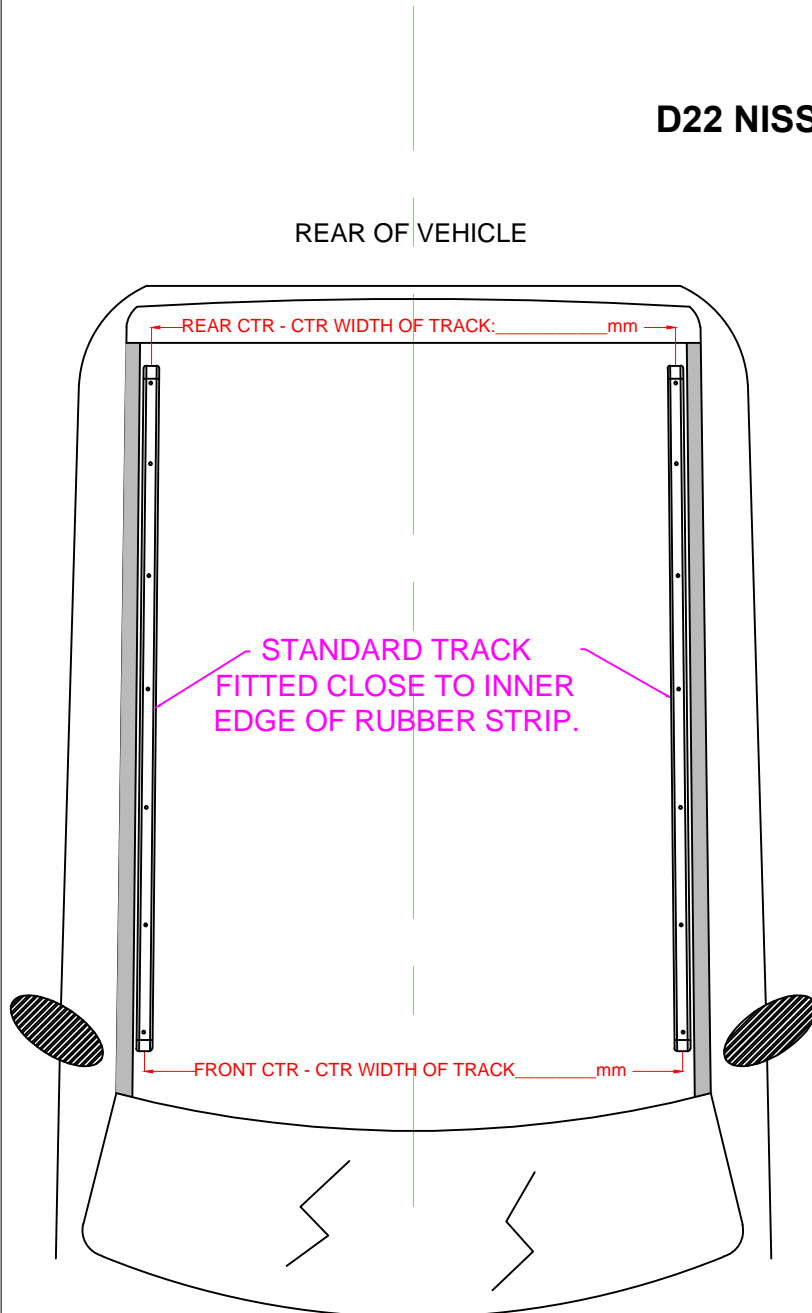

UPDATED: 31-1-2022

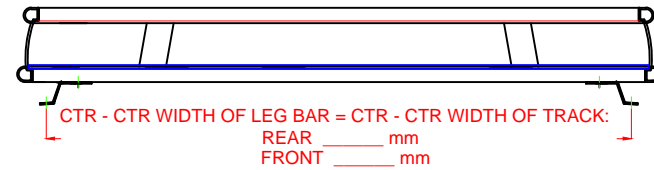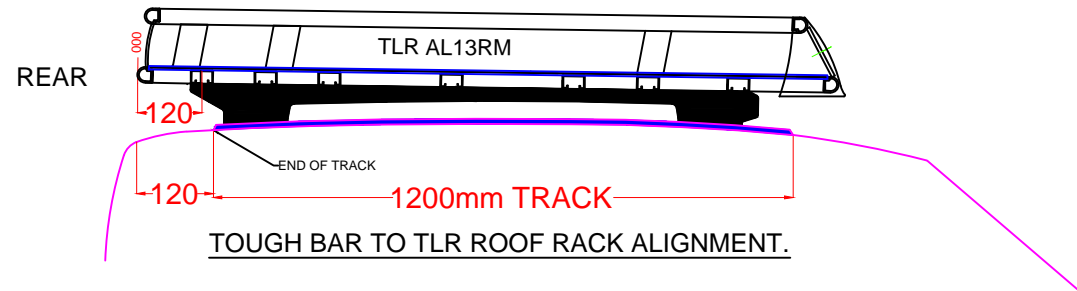

REAR VIEW

1. Fit Tracks, close as possible to inner edge of Rubber Strip on Roof Top as per Fitting Instructions.
NOTE: Sikaflex Sealant 252 must be used in and between Rivet Holes to seal and secure Tracks to Roof T
2. Measure the Centre to Centre width of the Tracks at the REAR and record the measurement.
3. Measure the Centre to Centre width of the Tracks at the FRONT and record the measurement.
4. With the TLR Roof Rack upside down, position Tough Bars on the specific Mounting Channels, as sho
5. Secure with M10 x 25 Hex. Set Screw, Star Washer, Flat Washer and Channel Nut.
6. Move the Tough Bars evenly both sides of Centreline to the Centre's of the Roof Tracks as shown.
NOTE: Tough Bars must be equal distance from both sides of Roof Rack - Front and Rear.
7. Tighten fasteners firmly to secure Tough Bars to Roof Rack.
8. With a person either side of the Roof Rack, carry the Roof Rack over the rear of the vehicle and lower i gently on the Roof Tracks.
NOTE: Rear of Roof Rack to be approx. 30mm - 50mm from rear edge of roof.
9. Fit the Brass Nuts into the Tracks (4 in each Track).
10. Fit the M6x16 But. Soc. Screws with Star Washers and Flat Washer through Leg Bar Foot and thread i Brass Hex Nuts in Track.
11. Check the position of Roof Rack and tighten all Fasteners firmly.

NOTE: Check all Roof Rack and Leg Bar Fasteners regularly, especially after traveling over unsealed rd and rough terrain.