

TLRAM



AWNING MOUNT - SHADE CLAMP

FIT INSTRUCTIONS

TLRAM Brackets fitted to Tracklander
(Enclosed or Open-Ended Models only).



TLRAM
(1 x Pair)


TLRAM and Awning fitted to Tracklander Roof Rack.

The **TRACKLANDER –Awning Mounting Bracket** is designed to mount all types of Shades or Awnings to the Sides of an Enclosed or Open Ended Tracklander Roof Rack. A single **TLRAM** Bracket can safely hold up to 10 Kg. Therefore, a Pair of **TLRAM** Brackets can safely carry up to 20Kg. For heavier Awnings or when travelling over rough terrain a third or fourth Bracket is recommended to help spread the Load along the side of the Roof Rack. The **TLRAM** is made from Zinc Plated Steel, then Powder Coated. The Clamping System has slotted holes to enable the fitment of all types of Shades and Awnings and can be clamped anywhere along the side of the Tracklander Roof Rack, without drilling mounting holes.

The **TRACKLANDER TLRAM** mounted to a **TRACKLANDER ROOF RACK**.


NOTE: Check distance between Brackets to suit Awning.

1

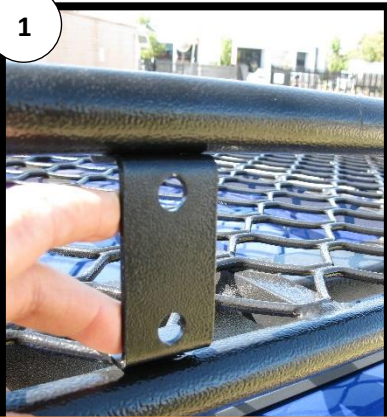


Fit Top Hat Backing Plate between Top & Bottom Rail.

2

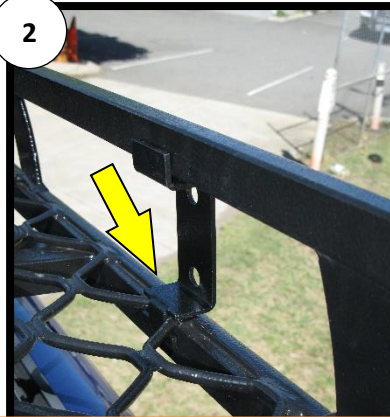

Notch-Out at bottom of Bracket fits into Mesh Loop.


3

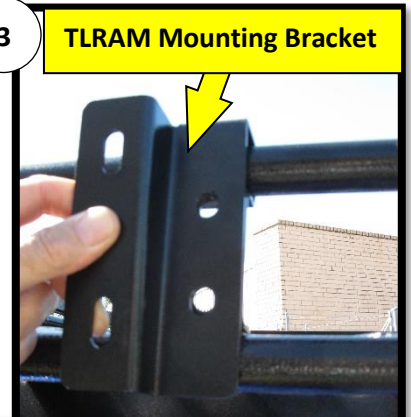

TLRAM Mounting Bracket


TLRAM Mounting Bracket fits over Top Hat Backing Plate.

4

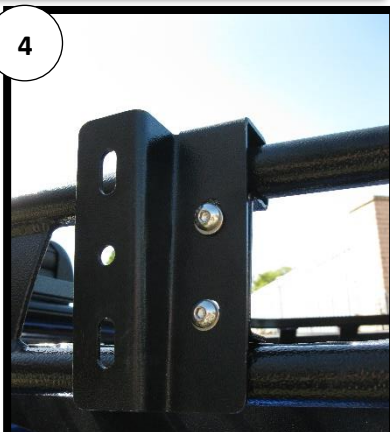

Align Holes and fit But. Soc. Screws, Flat Washers and Nyloc Nuts.

5

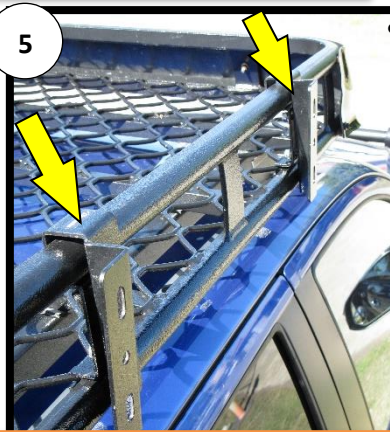

Fit second TLRAM Mounting Brackets to Side Rail, then tighten firmly. Fit Awning to the TLRAM Brackets, then tighten firmly.

NOTE: Apply a little Spray Lube (WD40, CRC or Vaseline) to threads before tightening, to prevent binding.

