
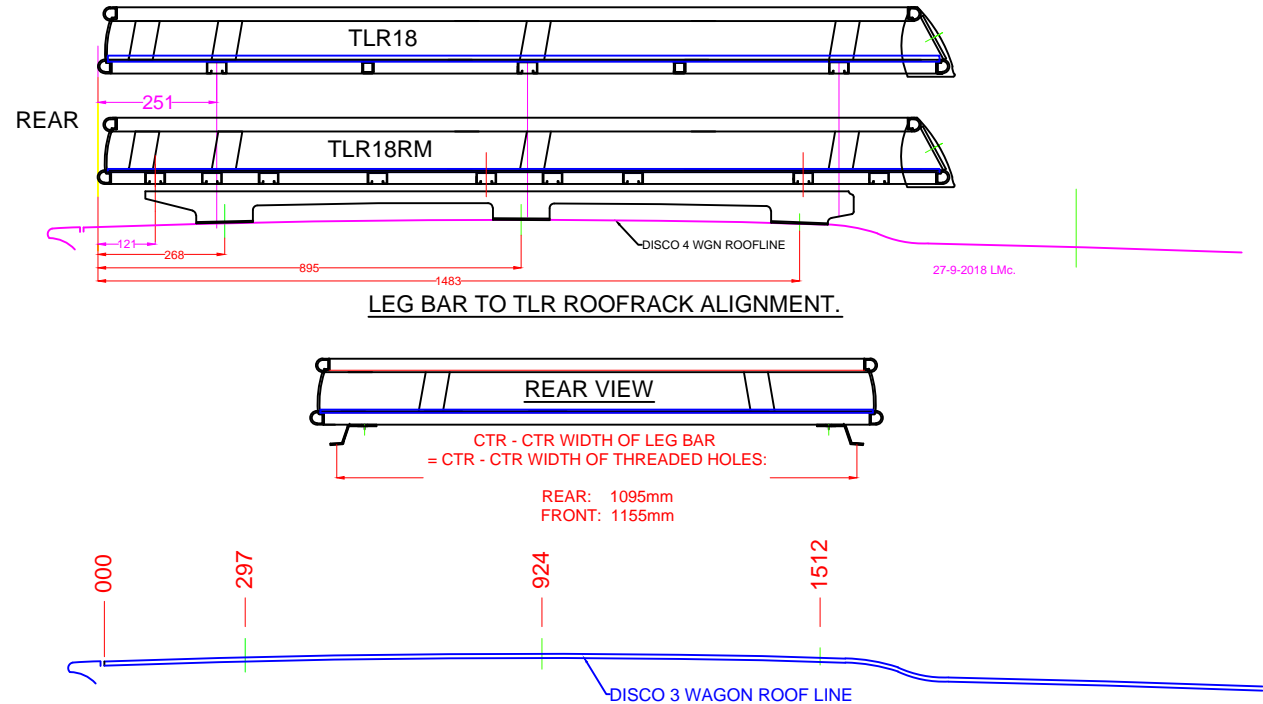


# FITTING INSTRUCTIONS

## FIXED MOUNTING POINTS IN ROOFTOP CHANNEL

### LAND ROVER DISCOVERY 3 WAGON (LB129-2) LEG BAR - TLR18 & TLR18RM.

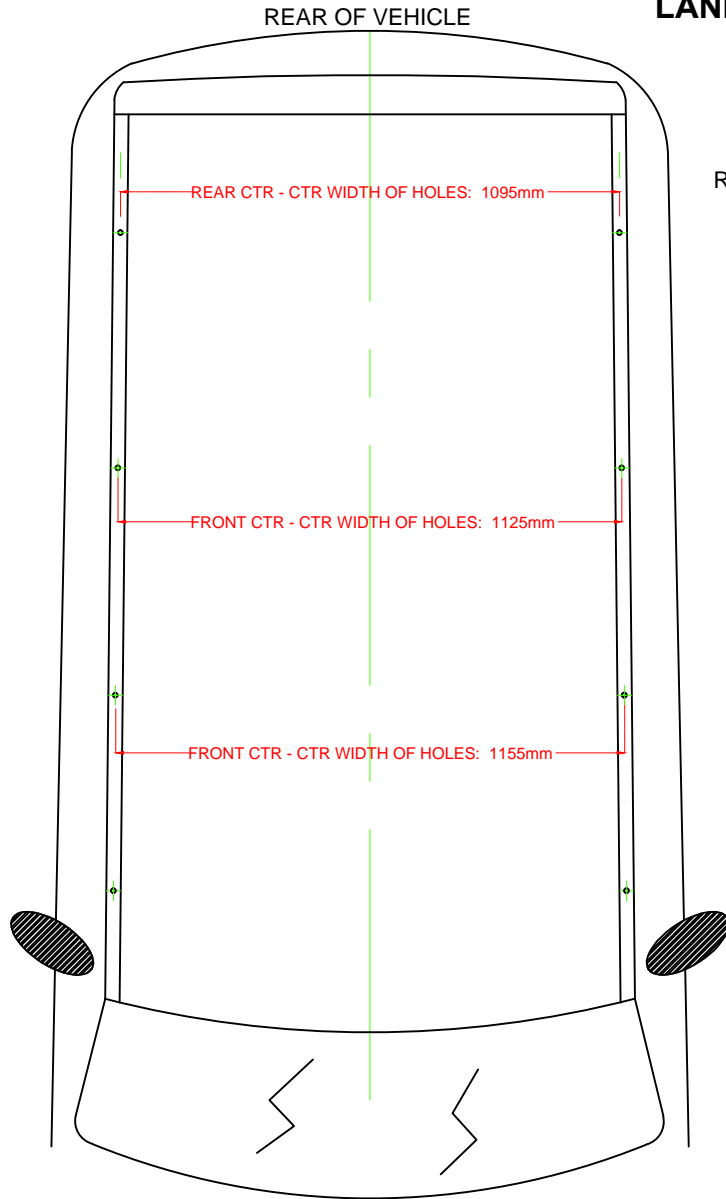

1. If there are no Round Caps on the Roof Top Cover Strips (4 x Caps on each side), mark and drill  $\varnothing 8.5$  Holes (as shown above), central on the Cover Strip, to expose the M6 Threaded Holes below. NOTE: Hook Tape Measure on rear of Cover Strip. While holding Tape Measure down, mark the centres of holes.
2. Locate the M6 Threaded Holes in the cavities. NOTE: Make sure Threads are clear.
3. Seal in and around the holes with Silicone Sealant.
4. With the TLR Roof Rack upside down, position Leg Bars on the specific Channels, as shown.
5. Secure with M10 x 25 Hex. Set Screw, Star Washer, Flat Washer and Channel Nut.
6. Move the Leg Bars evenly both sides of Centreline to the Centre's of the Threaded Holes as shown above.  
**NOTE: Leg Bars must be equal distance from both sides of Roof Rack - Front and Rear.**
7. Tighten the Fasteners firmly to secure Leg Bars to Roof Rack, and check the Hole Centres of the Leg Bar Foot Plates.
8. With a person either side of the Roof Rack, carry the Roof Rack over the rear of the vehicle and lower it gently onto the Rubber Roof Strips and align with the Hole Centres.
9. Fit the M6 x 20 But. Soc. Screws with Spring Washer & Flat Washer through Leg Bar Foot and into the Threaded Holes in Roof Top.
10. Raise the rear Tailgate, check clearance from Roof Rack and tighten all Fasteners firmly.