
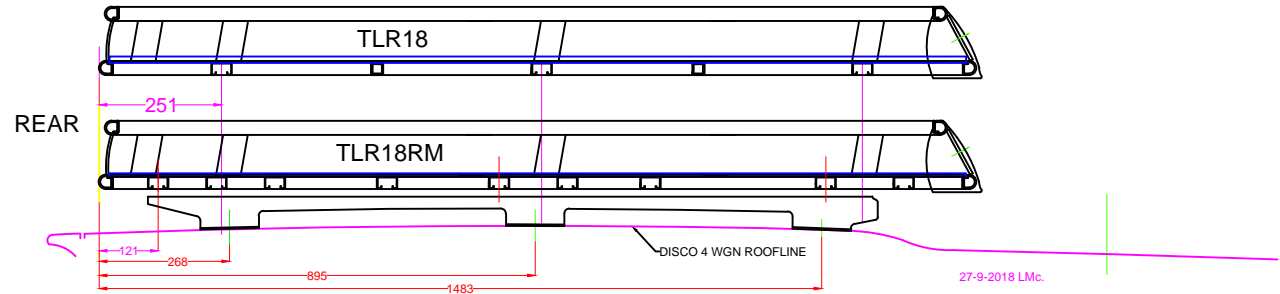



FITTING INSTRUCTIONS

FIXED MOUNTING POINTS IN ROOFTOP CHANNEL

LAND ROVER DISCOVERY 4 WAGON (LB129-2) LEG BAR - TLR18 & TLR18RM.

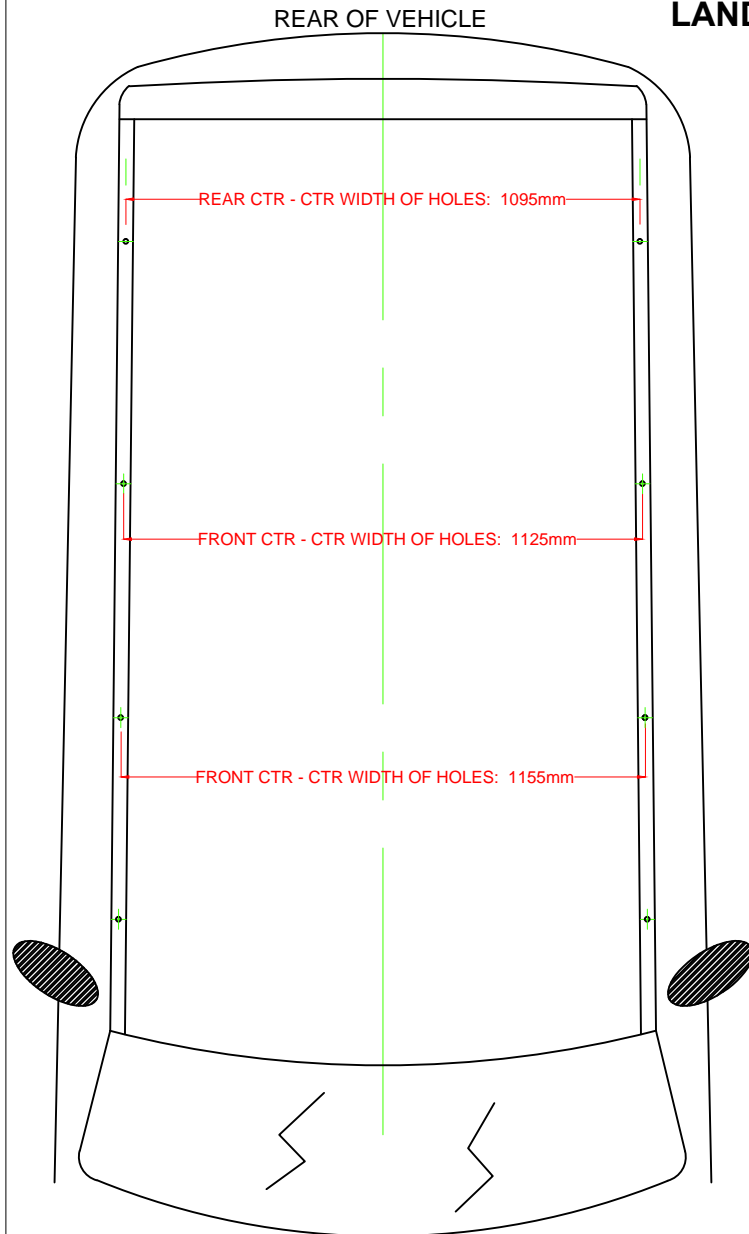

LEG BAR TO TLR ROOFRACK ALIGNMENT.

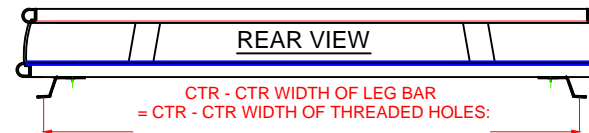

REAR: 1095mm
FRONT: 1155mm

1. Remove 8 x Round Cover Caps from the Rubber Strips on Roof Top. (4 x Caps on each side).
2. Locate the M6 Threaded Holes in the cavities. NOTE: Make sure Threads are clear.
3. Seal in and around the holes with Silicone Sealant
4. With the TLR Roof Rack upside down, position Leg Bars on the specific Channels, as shown.
5. Secure with M10 x 25 Hex. Set Screw, Star Washer, Flat Washer and Channel Nut.
6. Move the Leg Bars evenly both sides of Centreline to the Centre's of the Threaded Holes as shown above.
NOTE: Leg Bars must be equal distance from both sides of Roof Rack - Front and Rear.
7. Tighten the Fasteners firmly to secure Leg Bars to Roof Rack, and check the Hole Centres of the Leg Bar Foot Plates.
8. With a person either side of the Roof Rack, carry the Roof Rack over the rear of the vehicle and lower it gently onto the Rubber Roof Strips and align with the Hole Centres.
9. Fit the M6 x 20 But. Soc. Screws with Spring Washer & Flat Washer through Leg Bar Foot and into the Threaded Holes in Roof Top.
10. Raise the rear Tailgate, check clearance from Roof Rack and tighten all Fasteners firmly.

NOTE: Check all Roof Rack and Leg Bar Fasteners regularly, especially after traveling over unsealed roads and rough terrain.

27-9-2018 LMc.