
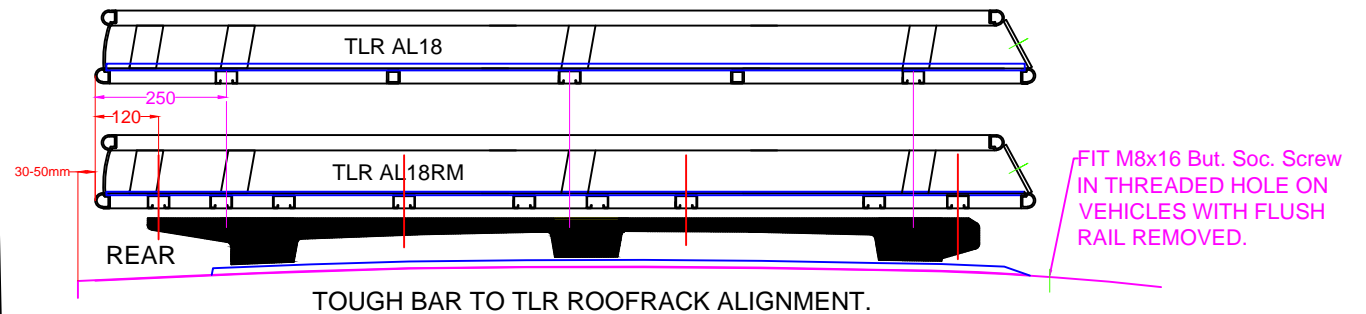


VERSION 3. FITTING INSTRUCTIONS


REAR OF VEHICLE **ISUZU MU-X GEN1. SUV LB72-02M (V3) TOUGH BAR - TLR18 & TLR18RM ROOF RACKS**

(ROOF DITCH- MOULDED TRACKS)

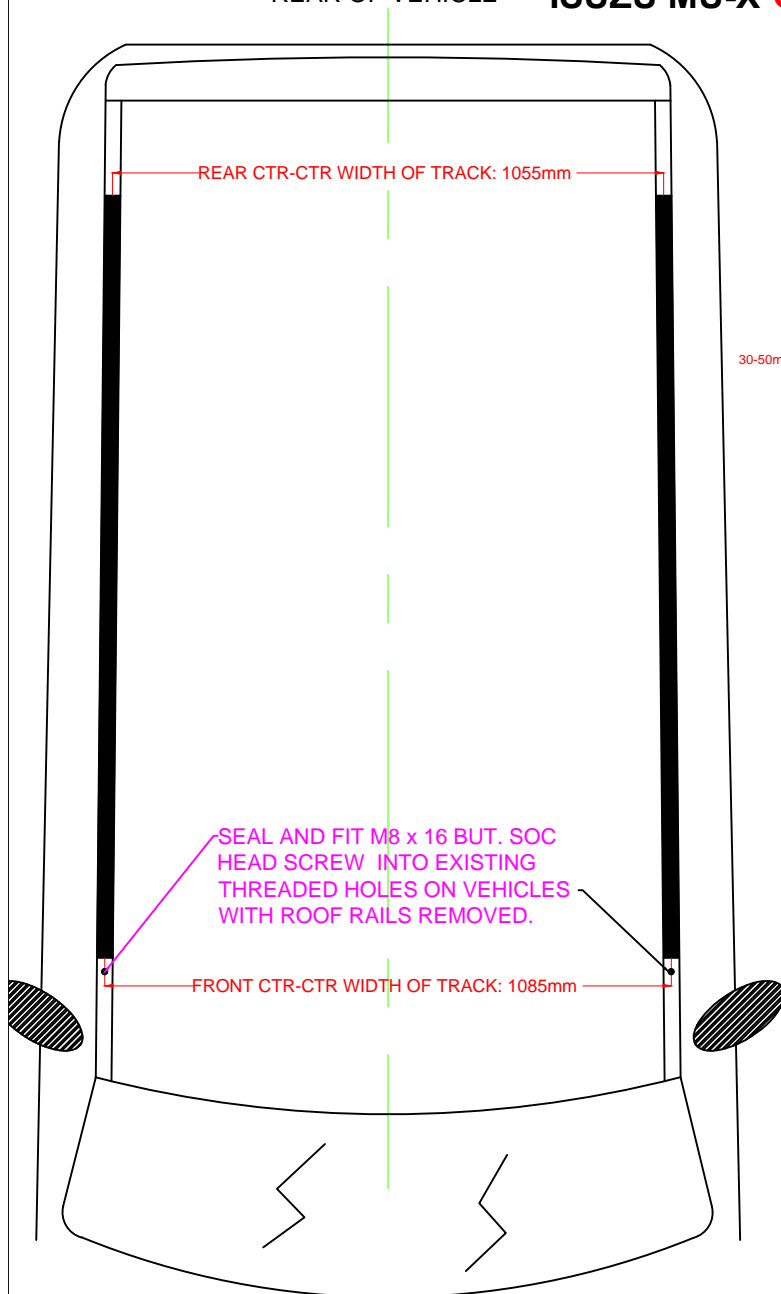

REAR VIEW

FOAM TAPE - Fully cover Foot Plate and 15mm up the back of Leg.

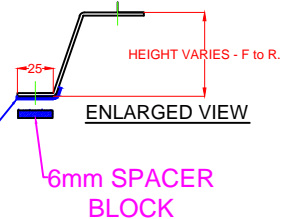

1. Fit Moulded Tracks in Channel on Roof Top as per Fitting Instructions.
 2. Measure the Centre to Centre width of the Tracks at the REAR and record the measurement.
 3. Measure the Centre to Centre width of the Tracks at the FRONT and record the measurement.
 4. With the TLR Roof Rack upside down, position Tough Bars on the specific Channels, as shown.
 5. Secure with M10 x 25 Hex. Set Screw, Star Washer, Flat Washer and Channel Nut.
 6. Move the Tough Bars evenly both sides of Centreline to the Centre's of the Roof Tracks as shown.
- NOTE: Tough Bars must be equal distance from both sides of Roof Rack - Front and Rear.**
7. Tighten fasteners firmly to secure Tough Bars to Roof Rack.
 8. With a person either side of the Roof Rack, carry the Roof Rack over the rear of the vehicle and lower it gently on the Roof Tracks.
- NOTE: Rear of Roof Rack to be approx. 30mm - 50mm from rear edge of roof.**
9. Fit the Brass Nuts into the Tracks (6 in each Track).
- NOTE: Raise Tough Bar and slide Spacer Block between Foot Plate and Track , one side at a time.**
10. Fit the M6x25 But. Soc. Screws with Spring Washers and Flat Washer through Leg Bar Foot Plate and secure to Threaded Insert Plate or Brass Hex Nuts in Track.
 11. Raise the rear Tailgate, check clearance from Roof Rack and tighten all Fasteners firmly.

NOTE: Check all Roof Rack and Tough Bar Fasteners regularly, especially after traveling over unsealed roads and rough terrain. UPDATED: 4-9-2024 LMc. (v4) © JARAM AUSTRALIA 1-11-2017