
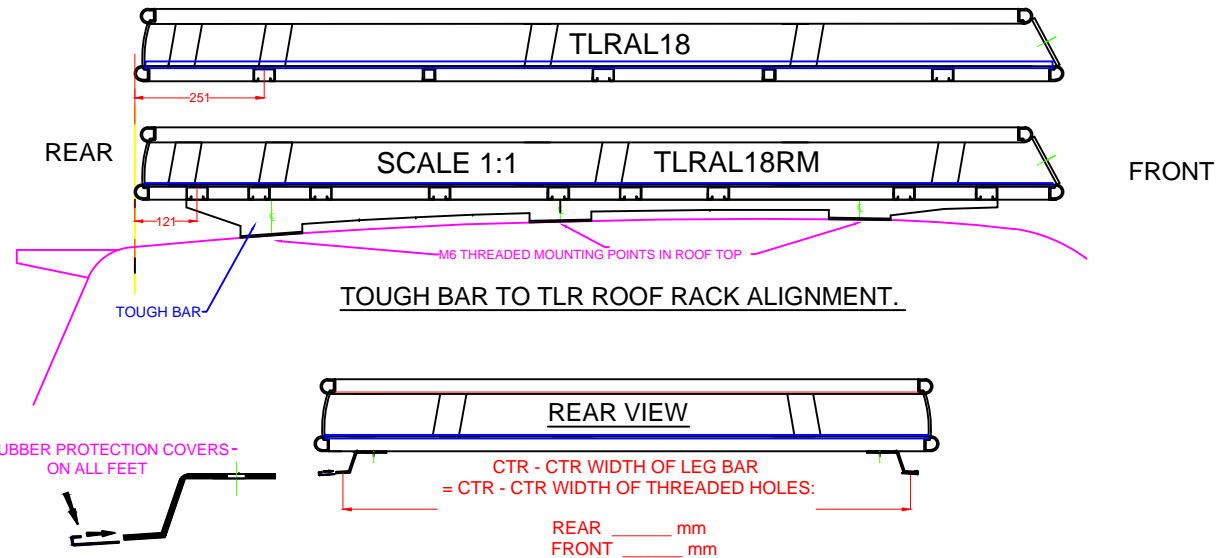


FITTING INSTRUCTIONS

FIXED MOUNTING POINTS IN ROOF TOP CHANNEL

RANGE ROVER SPORT (LB126) TOUGH BAR - TLR18 & TLR18RM.

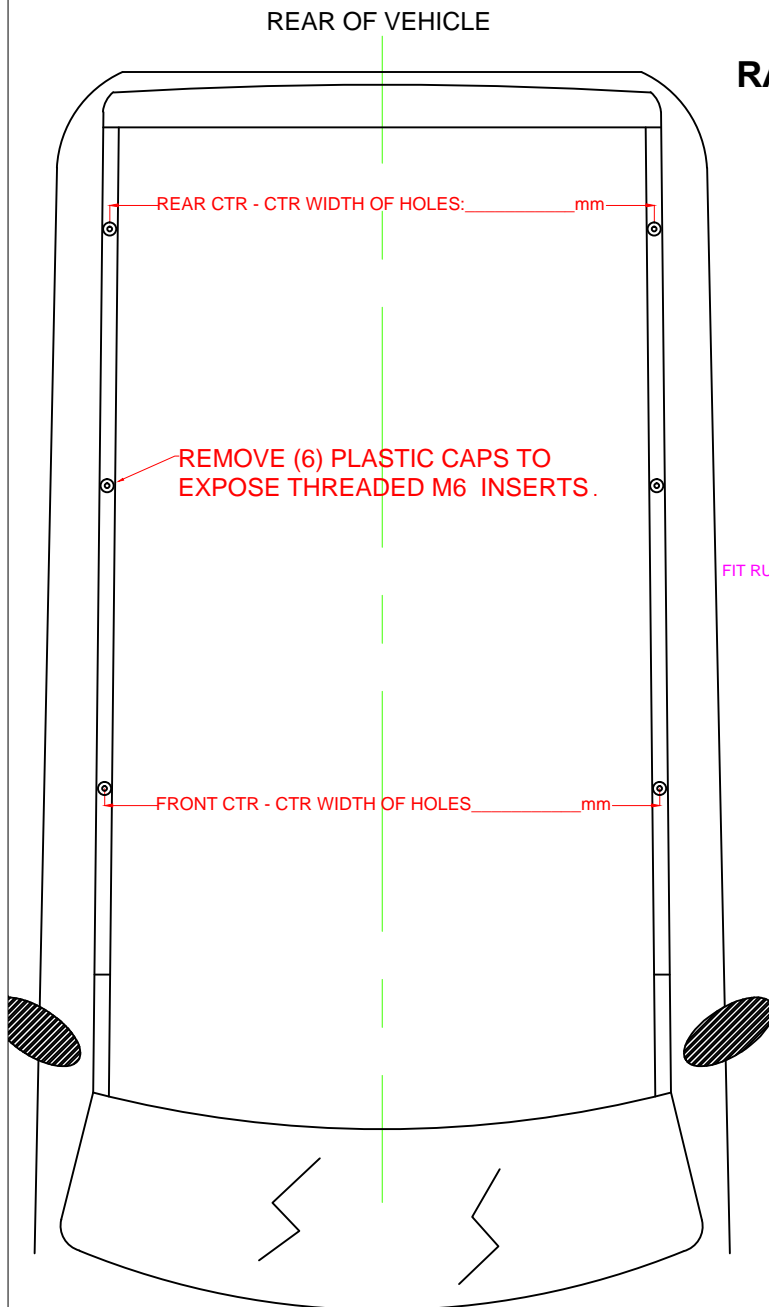

TOUGH BAR TO TLR ROOF RACK ALIGNMENT.

TOUGH BAR TO THREADED MOUNT POINTS IN ROOF TOP.

1. Remove 6 x Round Cover Caps from the Rubber Strips on Roof Top. (3 x Caps on each side).
 2. Remove Plastic Cap to expose the Threaded Holes in the cavities.
 3. Measure the Centre to Centre width of the Threaded Holes at the REAR of vehicle and record the measurement.
 4. Measure the Centre to Centre width of the Threaded Holes at the FRONT of vehicle and record the measurement.
 5. With the TLR Roof Rack upside down, position Tough Bars on the specific Channels, as shown.
 6. Secure with M10 x 25 Hex. Set Screw, Star Washer, Flat Washer and Channel Nut.
 7. Move the Tough Bars evenly both sides of Centreline to the Centre's of the Threaded Holes as shown.
- NOTE: Tough Bars must be equal distance from both sides of Roof Rack - Front and Rear.**
8. Tighten fasteners firmly to secure Tough Bars to Roof Rack.
 9. Apply Silicone Sealant to the Threaded Hole in each cavity.
 10. With a person either side of the Roof Rack, carry the Roof Rack over the rear of the vehicle and lower it gently onto the Black Cover Strip and align the Hole Centres.
 11. Fit the Rubber Protection Covers under the Tough Bar Feet.
 12. Fit the M6x20 But. Soc. Screws with Star Washer & Flat Washer through Tough Bar Foot and into the Threaded Holes in Roof Top.
 13. Raise the rear Tailgate, check clearance from Roof Rack and tighten all Fasteners firmly.

NOTE: Check all Roof Rack and Tough Bar Fasteners regularly, especially after traveling over unsealed roads and rough terrain.

UPDATED: 8-2-2022 LMc.