




TLRAL18HP Fitting Instructions

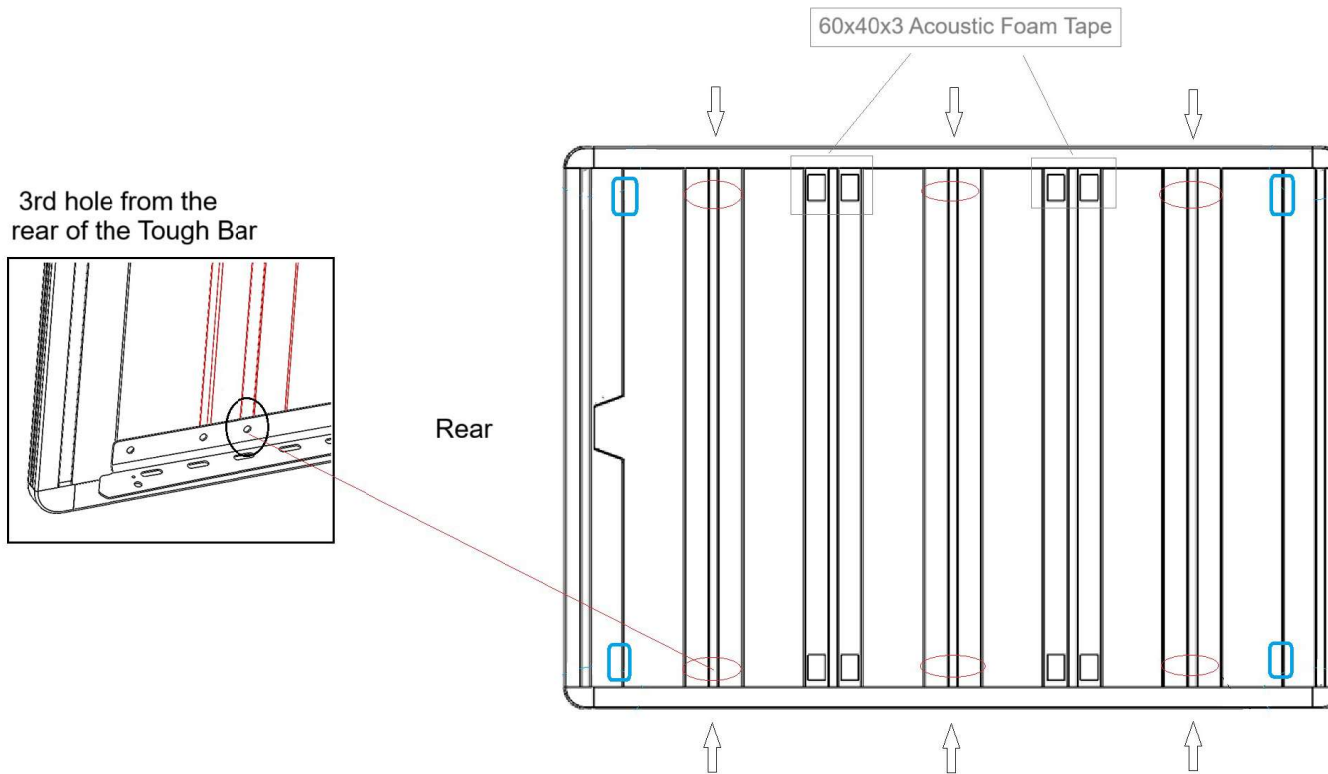

3rd hole from the rear of the Tough Bar

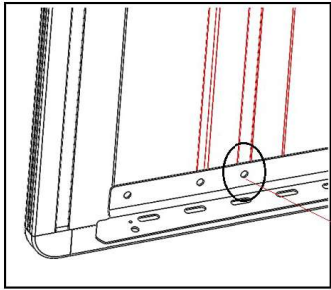


*Do this if Tough Bar make contact with the front or rear plank of the roof rack.

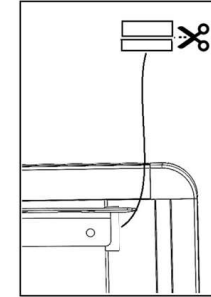

Cut and apply a portion of the acoustic foam tape where the Tough Bar makes contact with front or rear plank of the roof rack

Secure to Tough Bar with :



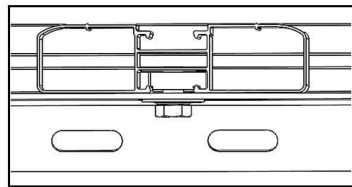

- M10 x 20 Hex Bolt ----- 6 pcs
- 3/8 x 1 1/4 Flat Washer---- 6 pcs
- M10 Inner Star Washer-- 6 pcs
- 60x40x3 Foam Tape ----- 10pcs



Not included - M10 Channel Nut supplied with Leg Bar fitting kit

Included bolt - M10x20 Hex Bolt - substitute for the M10x25 supplied with Leg Bar fitting kit

Legends:

-  Possible contact point between planks and Tough Bar terminal edge
-  Location of M10 Strut Nut and fastener kit
-  Indicating the plank to be secured to the Tough Bar
-  Location of Acoustic Foam Tape