


LAND ROVER DISCOVERY 5 WAGON (with Roof Rails) 2017 on TRACKLANDER (TLR18RM, TLR18FT, TLR18 & TLR18P) FITTING INSTRUCTIONS.



Carefully remove Cover Caps from Roof Rail. **WARNING: Be careful not to damage Roof Rail.**

1.

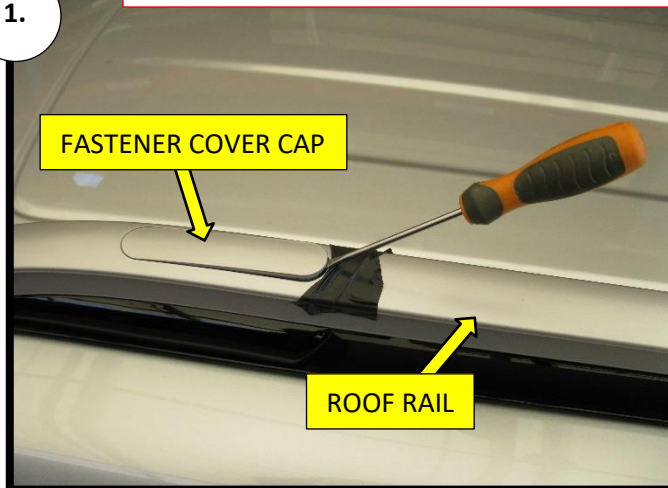


- Remove the (3) Caps from both Roof Rails with a small Flat Blade Screw Driver.

2.



- Cap removed, showing T45 Torx Head Bolts below.

3.

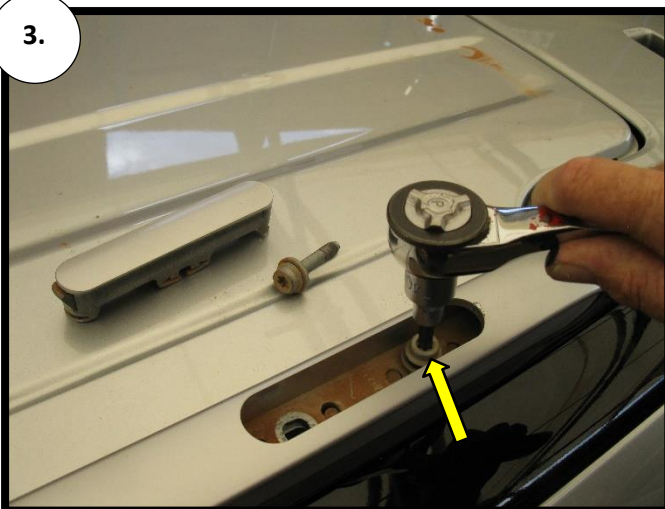

- Remove 2 x Bolts from each Cavity using T45 Torx Head Bit and wrench.


4.



- Fit Spacer Blocks inside Cavities.

NOTE: REAR, CENTRE AND FRONT ANGLE BRACKETS ARE NOT THE SAME. (Front Brackets Offset Holes and Opp. Hand.)
(REAR: 2 x **LB133ABR**) (CENTRE: 2 x **LB133ABC**) (FRONT RIGHT: 1 x **LB133ABFR**) & (FRONT LEFT: 1 x **LB133ABFL**)

LAND ROVER DISCOVERY 5 WAGON (with Roof Rails) 2017 on TRACKLANDER (TLR18RM, TLR18FT, TLR18 & TLR18P) FITTING INSTRUCTIONS.

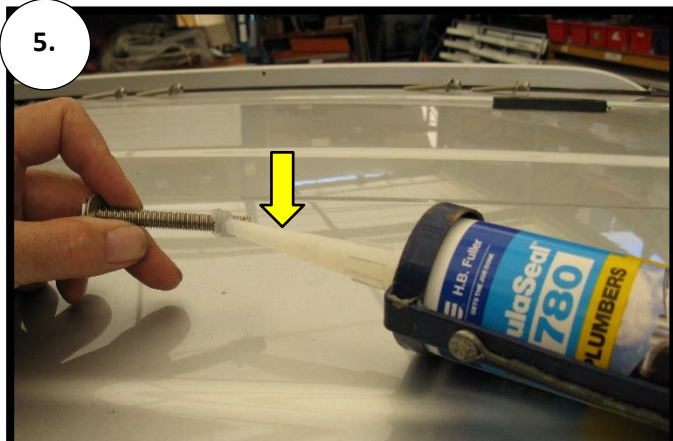


- Fit 5/16 x 3/4 Flat Washer to But. Soc. Screws
- Apply Silicone Sealant to M8 But. Soc. Head Screws.




- Fit But. Soc Screws into Angle Brackets and align with Holes.
SEE PARTS LIST FOR ANGLE MOUNTING BRACKET DETAILS.




- Position Angle Mounting Brackets in their correct locations.
- Fit specific But. Soc. Screws into threaded holes by hand, before tightening.

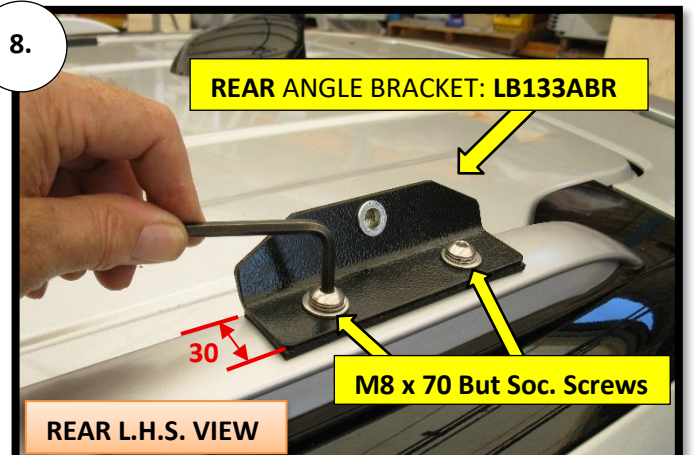

- NOTE: Check But Soc. Screw lengths are correct for REAR Angle Mounting Brackets.
- Tighten M8 x 70 But Soc. Screws with Washers firmly.

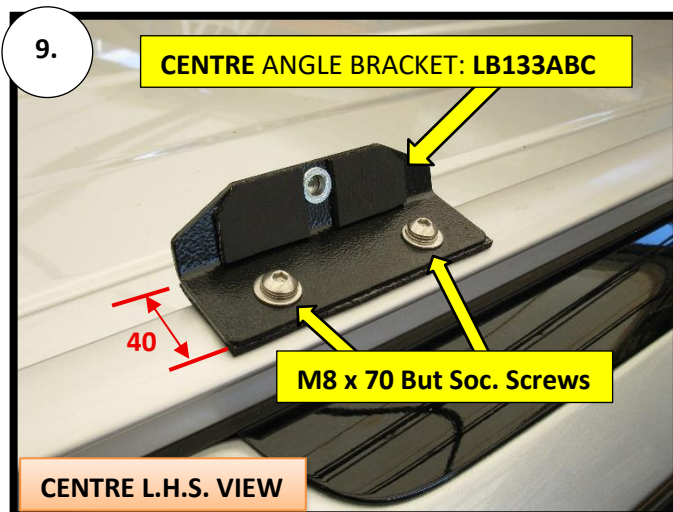


- NOTE: Check But Soc. Screw lengths are correct for CENTRE Angle Mounting Brackets.
- Tighten M8 x 70 But Soc. Screws with Washers firmly.


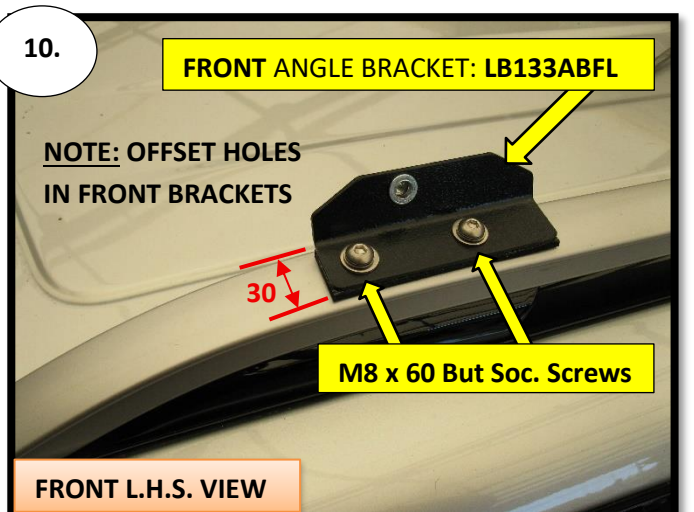


- NOTE: Check But Soc. Screw lengths are correct for FRONT Angle Mounting Brackets.
- Tighten M8 x 60 But Soc. Screws with Washers firmly.



LAND ROVER DISCOVERY 5 WAGON (with Roof Rails) 2017 on TRACKLANDER (TLR18RM, TLR18FT, TLR18 & TLR18P) FITTING INSTRUCTIONS.

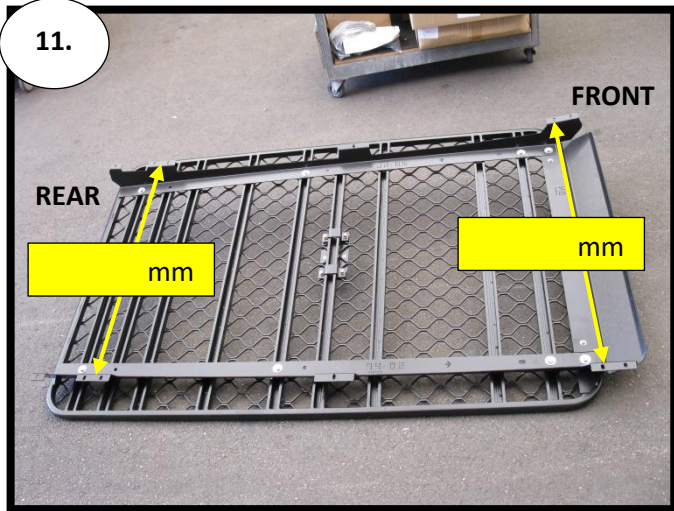

- Fit M10 Hex Set Screws, Star Washers, Flat Washers and Strut Nuts to Tough Bar holes. (See location in Set Up Diag.)
- Fit Acoustic Foam Tapes to top side of Tough Bar at every Non- Fastener Channel contact point.
- Measure and record O/All widths of Rear and Front Angle Mounting Brackets.
REAR: _____ mm FRONT: _____ mm
- Fit Tough Bars to Roof Rack Channels to the Front & Rear Angle Bracket widths.
- When Rear and Front widths are correct, tighten Fasteners firmly.

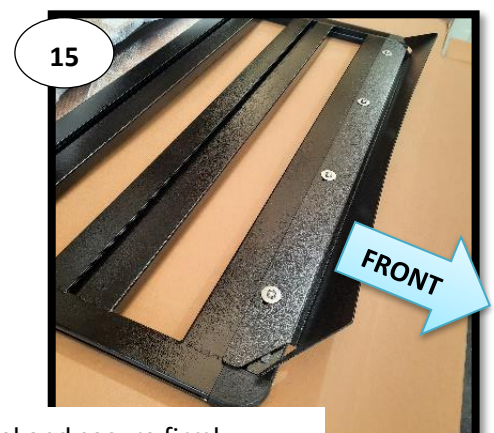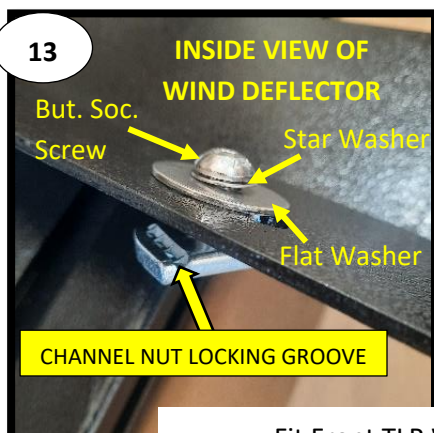


- Fit Front TLR Wind Deflector (TLRWD11) to Front Channel and secure firmly.

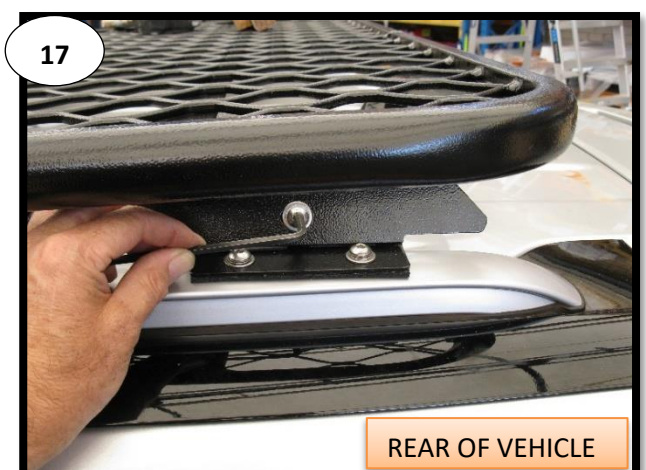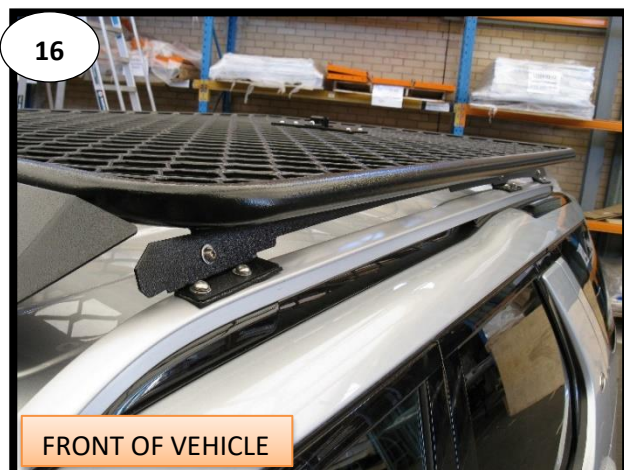

- With a person both sides, lower Roof Rack onto vehicle and align Tough Bar Leg Plate holes, with Angle Bracket holes.
- Fit Fasteners (M8x25But. Soc. Screws, Star Washers and Flat Washers) in all Threaded Holes first, then tighten firmly.

LAND ROVER DISCOVERY 5 WAGON (with Roof Rails) 2017 on TRACKLANDER (TLR18RM, TLR18FT, TLR18 & TLR18P) FITTING INSTRUCTIONS.

18.

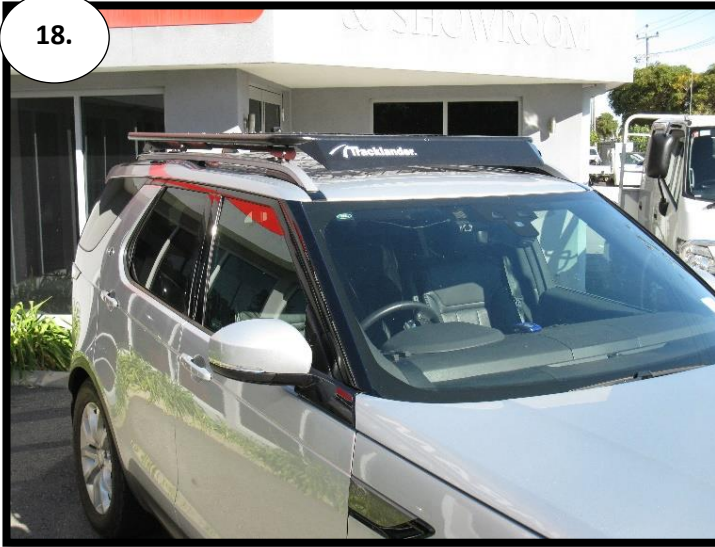

- Tighten all Tough Bar to Angle Mounting Bracket Fasteners firmly.
- Check and tighten all other Fasteners firmly.
- Regularly check that all fasteners are tight, especially after travelling over rough terrain.

