

VERSA INTERNAL CANOPY BAR

Suits most UTE canopies and suited to Dual Skin Canopies

* Can not be free mounted, must be fitted to a canopy.

Picture for inside view only




Thank you for purchasing a TRACKLANDER 4WD ROOF RACK. Before you start, take a moment to familiarise yourself with the Fitting Instructions and the components received.

Refer to the next section for a list of all the components, quantities and tools required.

What's inside the box

VERSA INTERNAL CANOPY BARS


Note: 1 complete set consists of a pair of VERSA BARS

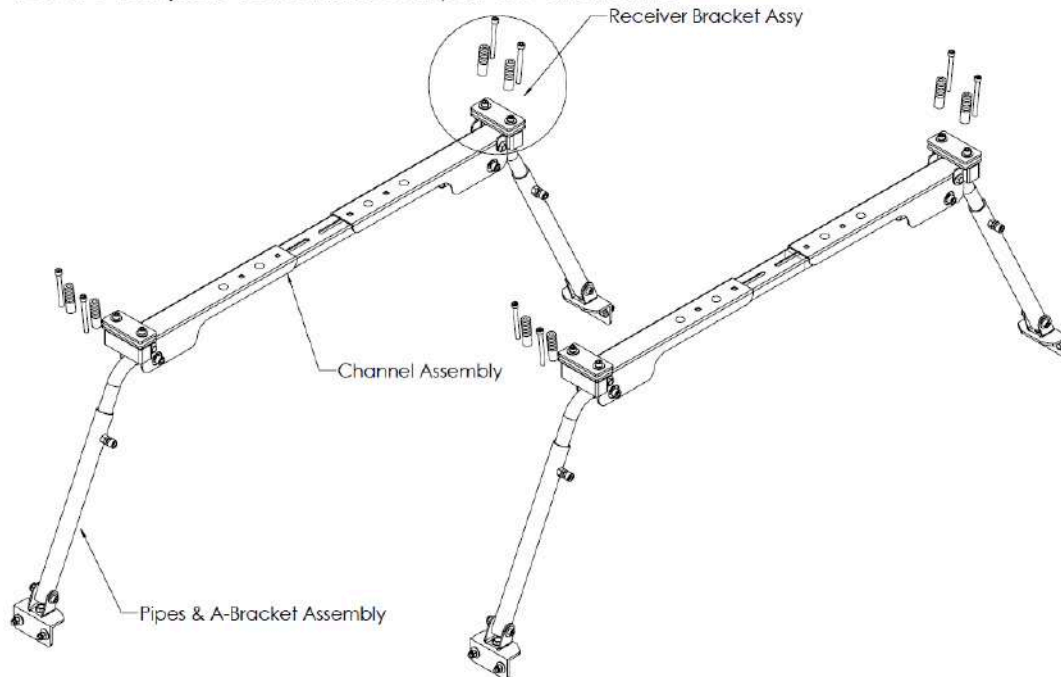

No	Item	Qty
1	Channel Assembly	2
2	Receiver Bracket Assembly	4
3	Pipes and A-Bracket Assembly	4

BOM for Channel Assembly

Note: 2 assembly per set

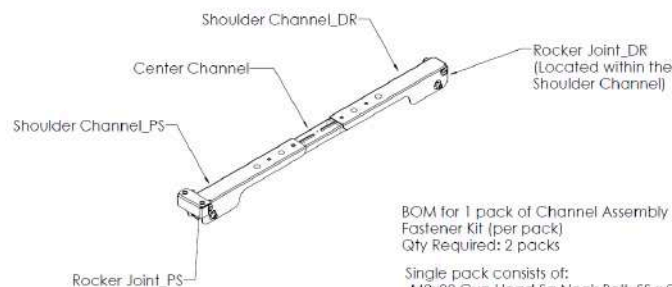


BOM for 1 pack of Channel Assembly
Fastener Kit (per pack)
Qty Required: 2 packs

Single pack consists of:
 -M8x20 Cup Head Sq Neck Bolt, SS x 06
 -M8x20 Socket Head CSK Screw, SS x 02
 -5/16 Flat Washer, SS x 08
 -M8 Nyloc, ZP x 08
 -M10x25 Socket Head Cap Screw, SS x 02
 -M10 Thin Nut, ZP x 02

BOM for Bracket Receiver Assembly

Note: 4 assembly per set

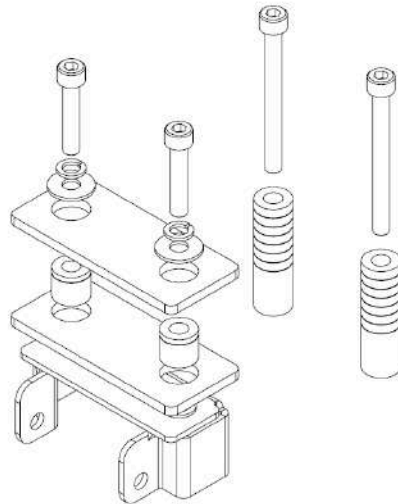


BOM for 1 pack of Bracket Receiver Assembly Fastener Kit (per pack)
Qty Required: 4 pack

Single pack consists of:
-M8x40 Socket Head Cap Screw, SS x 02
-M8x80 Socket Head Cap Screw, SS x 02
-M8 Spring Washer, SS x 02
-5/16x3/4 Flat Washer, SS x 02

BOM for Pipes and A-Bracket Assembly

Note: 4 assembly per set

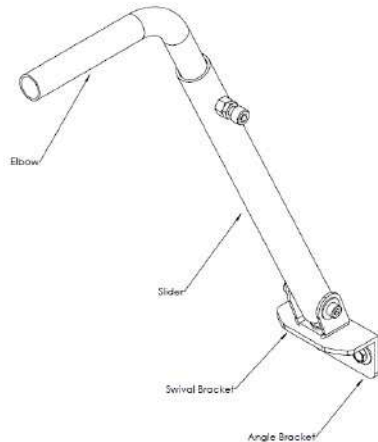

BOM for 1 pack of Pipes and A-Bracket Assembly Fastener Kit (per pack)
Qty Required: 4 pack

-M10x25 Socket Head Cap Screw, SS x 01
-M10 Thin Nut, ZP x 01
-M10x60 Socket Head Cap Screw, SS x 01
-3/8x1 Flat Washer, SS x 02
-M10 Nyloc Nut, ZP x 01
-M8x25 Hex Bolt, SS x 03
-5/16 Flat Washer, SS x 06
-M8 Nyloc Nut, ZP x 03

Tools required

13mm Socket, M8 (Recommended Torque Setting: 22Nm)

17mm Deep Socket, M10 (Recommended Torque Setting: 44Nm)


8mm Hexagon Wrench/Key, M10 (Recommended Torque Setting: 44Nm)

Measuring Tape


Sikaflex 252 Adhesive Sealant

Step 1: Assemble the Versa Internal Canopy Bar

Assemble the Channel Assembly per illustration below:

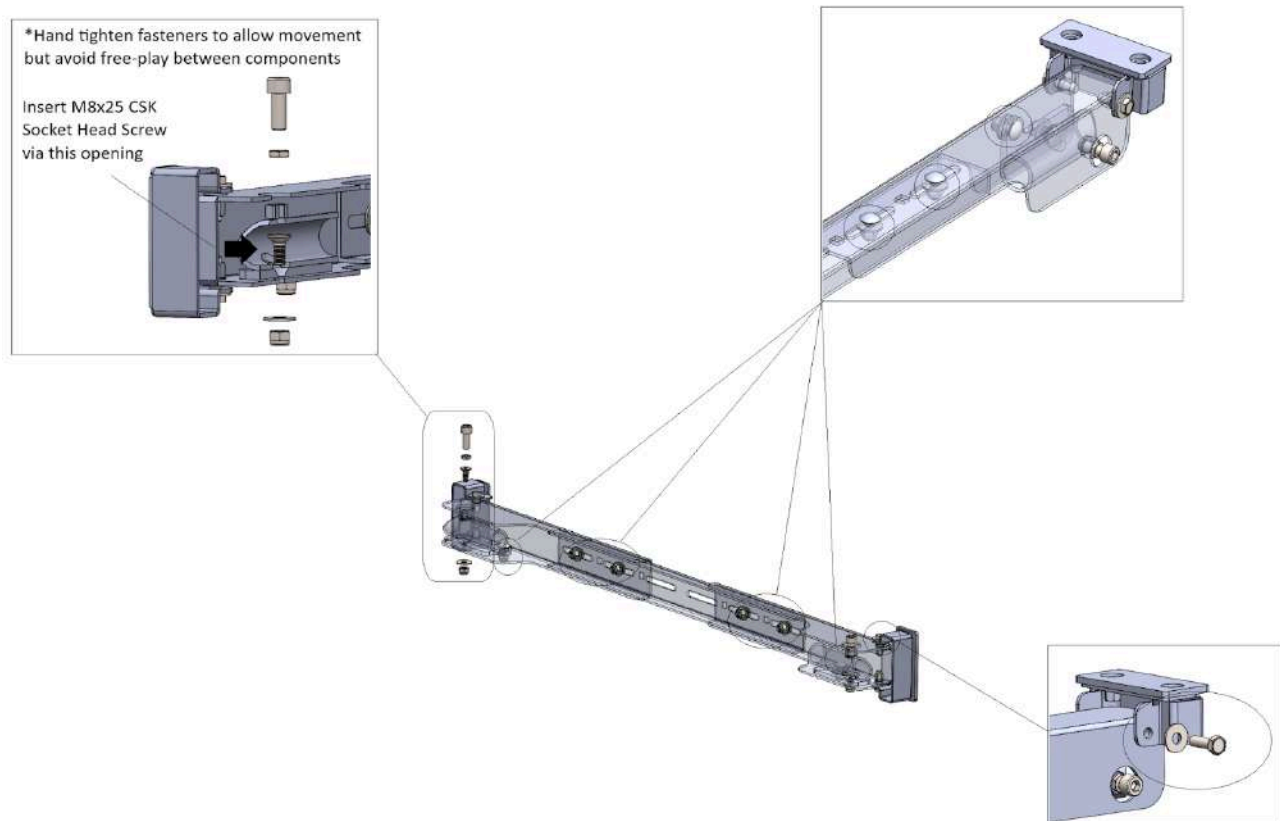


Insert the Pipes & A-bracket assembly onto the Channel Assembly as shown below:

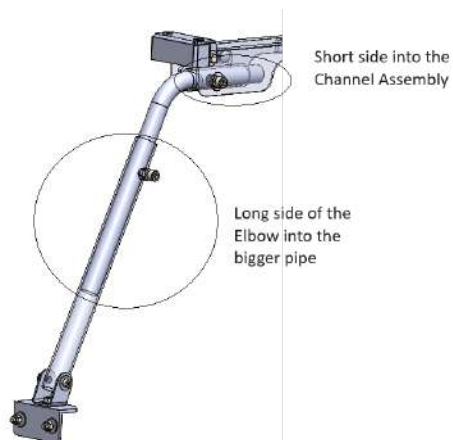

Step 2: Mounting the VERSA Bar onto the Well Tub


(Prerequisite prior to installation: Top Load Bar to be selected)

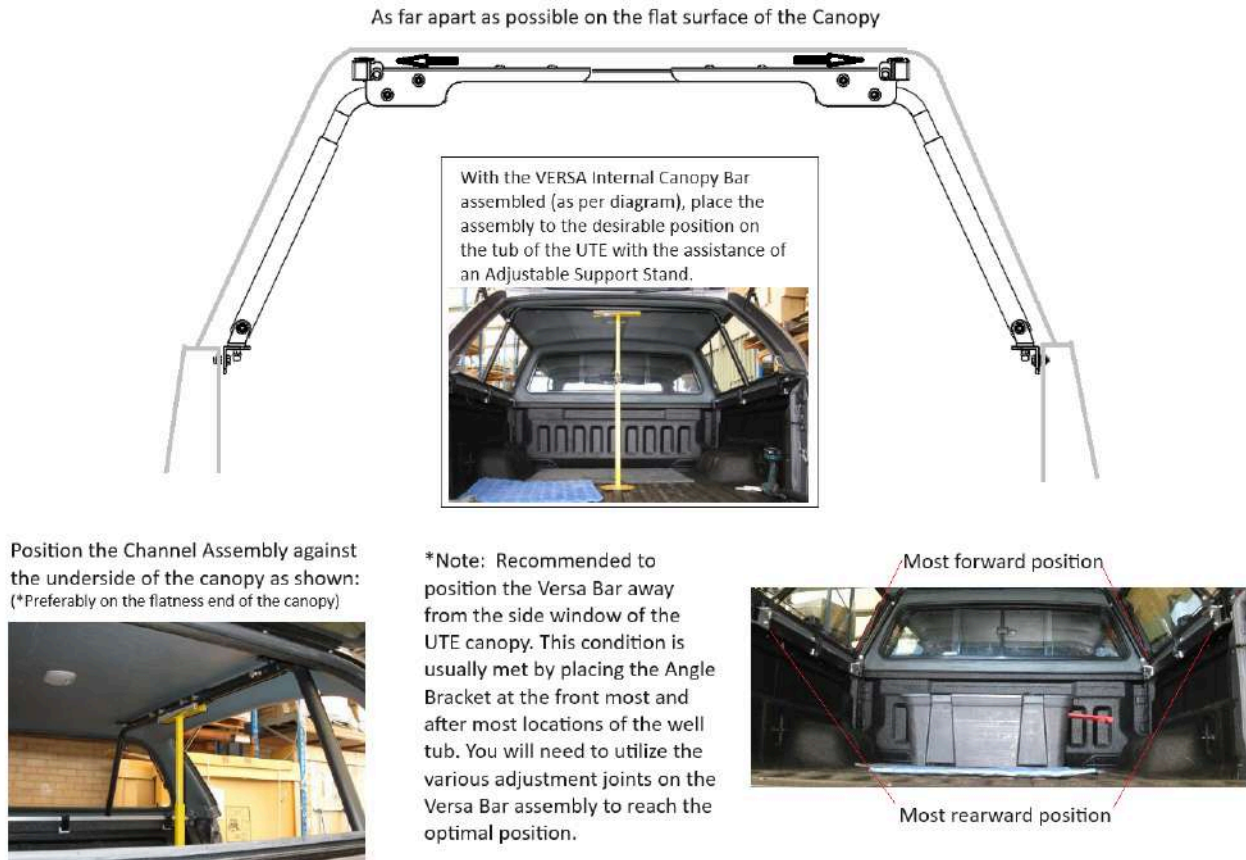

- Check position of Versa Internal Canopy Bar for the following:
 - Channel Assembly is central – left to right
 - Receiver Brackets are flat against the underside of the canopy roof
 - Position backwards or forwards is correct
 - Canopy bars must be as close to vertical fore and aft as possible.



- Now that the Channel Assembly is in the correct position, we shall move on to set the position of the Swivel Bracket.

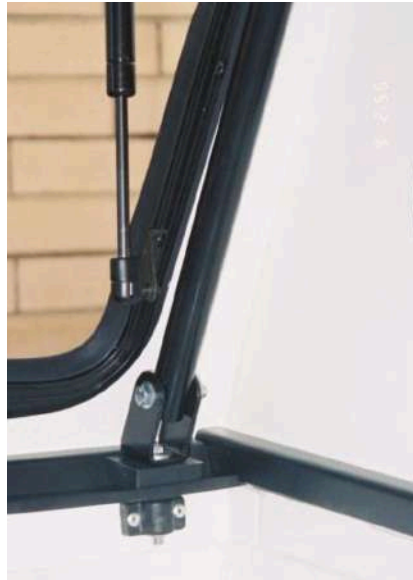

Option A:

Direct mounting
onto the solid ledge
of the Well Body



Option B:

Mounting via a Angle
bracket where a solid
ledge is not present


***Note:**

Swivel Brackets must rest firmly on Channel ledge (level with top of Ute tray). You may twist the Swivel Bracket forward or backward to set the Pipe Assembly to your desirable position.

- Marked all the mounting holes location onto the mating face of the Well Tub

Step 3: Creating mounting holes

- Mark holes with pen and lower Adjustable Stand
- Drill 3mm pilot holes on the marked holes locations

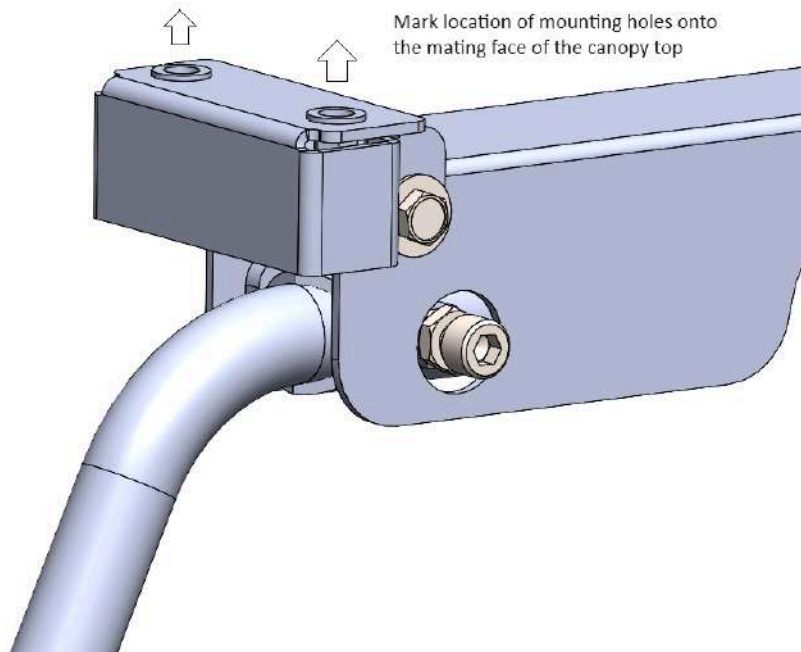

Fitting notes:

"If Hood Lining is fitted, burn holes with Soldering Iron through Lining before drilling through Canopy".



"If an ABS Plastic Canopy is fitted, melt the inside of the Roof Top holes with a Hot Soldering Iron to seal the plastic and prevent fractures".



- Drill 20mm diameter holes through the canopy
- When an Angle Bracket is utilized for mounting the Pipe Assembly (Option B), drill 10mm diameter holes through the Canopy Channel Ledge using the holes location marked earlier.

Step 4: Mounting the Versa Bar onto the canopy

- Insert Bushes into the pre-drilled holes of the canopy.
- Lay the EPDM pad over the bushes.
- Make sure that the bushing sits slightly lower than the EPDM pad.
- If the Bushes sit higher than the EPDM pad, shorten them using the line around the circumference with a saw or angle grinder.

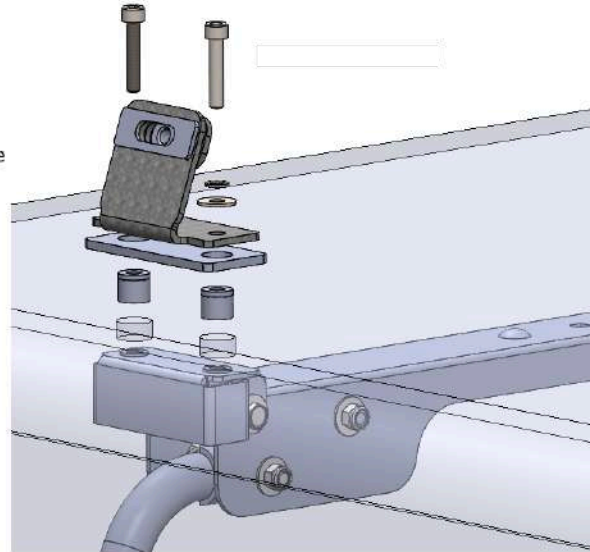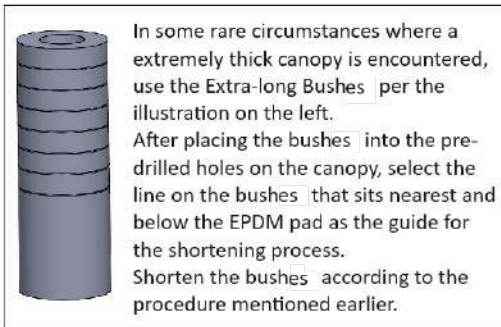

- Apply Sikaflex 252 Adhesive Sealant around the gap between the bushing and the hole on the canopy
- Secure the Versa Bar to the canopy via the X bracket using the flat washer, spring washer and M8 Cap Screw provided.

- Continue to secure the fasteners on the Angle Bracket and Swivel Bracket to complete the installation of the Versa Internal Canopy Bar.
- The installation is now completed and ready to receive the selected Top Load Bar.
- Refers to the fitting instruction of XLB138-2 or XLB138-3 if the original recommended Top Load Bar is selected.



SAFETY

- Cargo must be secured firmly onto the Roof Rack during operation at all times.
- Frequently check the tightness of cargo on the Roof Rack, especially when travelling over rough terrain or off-road
 - » Use only non-stretchable fastening ropes or straps to attach cargo onto the Roof Rack.
- Extreme care must be taken in off road conditions.

MAINTENANCE

- All bolted connections should be checked after driving a short distance when you first install your roof racks
- All bolted connections should be checked at regular intervals, depending on road conditions, usage, loads and distances travelled
- All bolted connections should be checked each time they are re-fitted.



IMPORTANT WARNING!

IT IS CRITICAL THAT ALL TRACKLANDER 4WD ROOF RACK PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN VEHICLE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL TRACKLANDER 4WD ROOF RACK PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND TEAR. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR TRACKLANDER 4WD ROOF RACK AND ACCESSORIES PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND WARNINGS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSON.

NOTE: TRACKLANDER 4WD ROOF RACKS will not be responsible for any damage caused by the failure to install the product according to these instructions. Please call us if you have any questions about the installation of this product.

TRACKLANDER 4WD ROOF RACKS

T : (08) 9451 0700 E :sales@tracklander.com.au W
:tracklander.com.au A:12 Railway Parade, Welshpool, WA 6106
OPEN 8.00AM - 5.00PM MON-FRI