


Tracklander


TLRAL28TC - SET UP & FITTING INSTRUCTION 78 Series Landcruiser Troopy.

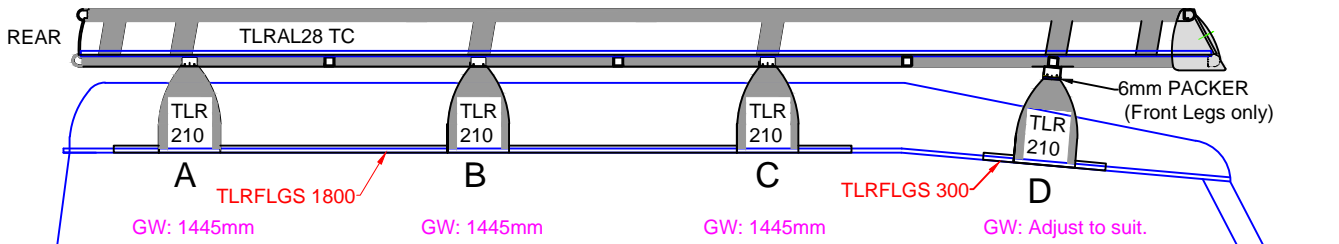

- With the Tracklander Roof Rack upside down, fit and position the A,B & C Leg Mounts to correct Gutter Widths (1445mm O/A) and tighten firmly. **NOTE: Make sure Leg Mounts are in line, Front to Rear.**
- Move the Front Leg Mounts (D) as wide as possible and tighten.
- Fit the FLGS1800 (Full Length Gutter Supports) into the Flat Section of the Vehicle Gutter, both sides.
- With 2 persons either side of Roof Rack, lift Roof Rack over rear of vehicle and lower it gently into the Full Length Gutter Supports.
- Release and slide Front Leg Mounts towards the vehicle Gutters.
- Slide Roof Rack forwards or backwards until Front Leg Mounts align with sloping Gutter.
- Fit FLGS300 Gutter Support under the Front Leg Mounts, in Gutter.
- Check alignment with Gutter and Secure Front Leg Mounts (D) to Roof Rack Channel and tighten firmly.
- Starting at the Rear, secure Leg Clamps to the underside of Gutter and tighten firmly.
- **NOTE: Do not over tighten Gutter Clamps. (Watch closely as clamp is tightened. As soon as the bottom lip starts to flex, that is tight enough)**
- **WARNING: Make sure all Fasteners are regularly checked for tightness, especially when traveling over rough terrain.**


©JARAM AUSTRALIA 10-5-2022

WIND DEFLECTOR - SET UP (TROOPY LANDCRUISER) TLRAL28OETC (35D) TRACKLANDER OPEN ENDER (2800L x 1270W)

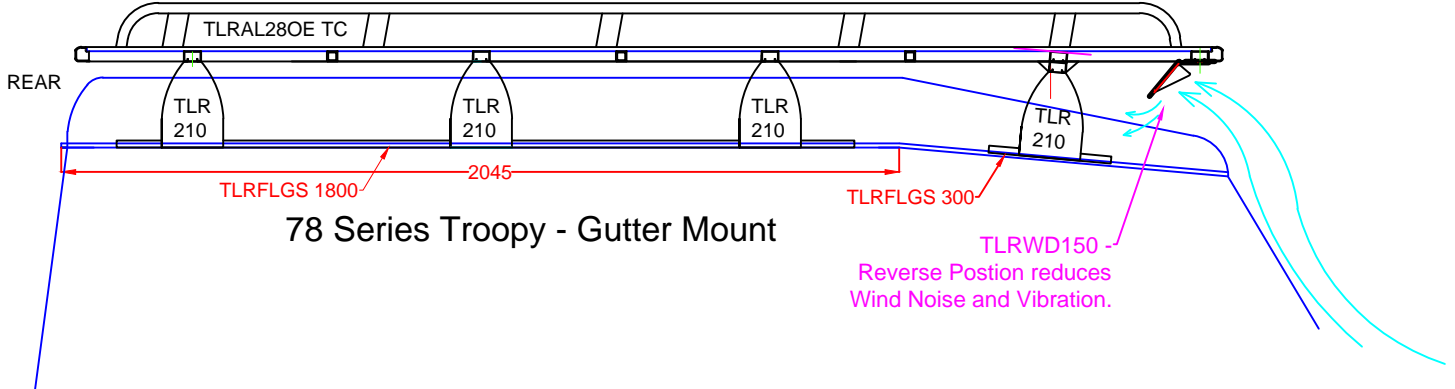

TLRAL28TC-FT - SET UP & FITTING INSTRUCTION 78 Series Landcruiser Troopy.

STANDARD - 8 LEG MOUNT

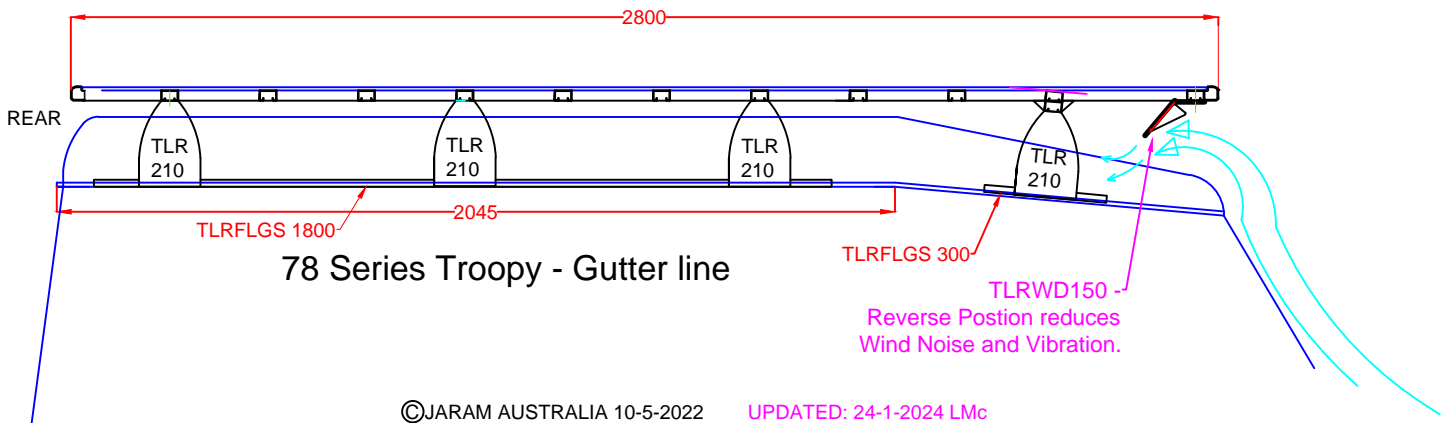

©JARAM AUSTRALIA 10-5-2022

UPDATED: 24-1-2024 LMc