LB33 (V2) - FITTING INSTRUCTIONS

ROOF RAIL MOUNT (Fastens to existing Threaded holes on inside of Roof Rails)

R51 NISSAN PATHFINDER WAGON (2005-2012) - TOUGH BAR SUITS TLR18 & 18RM ROOF RACKS.

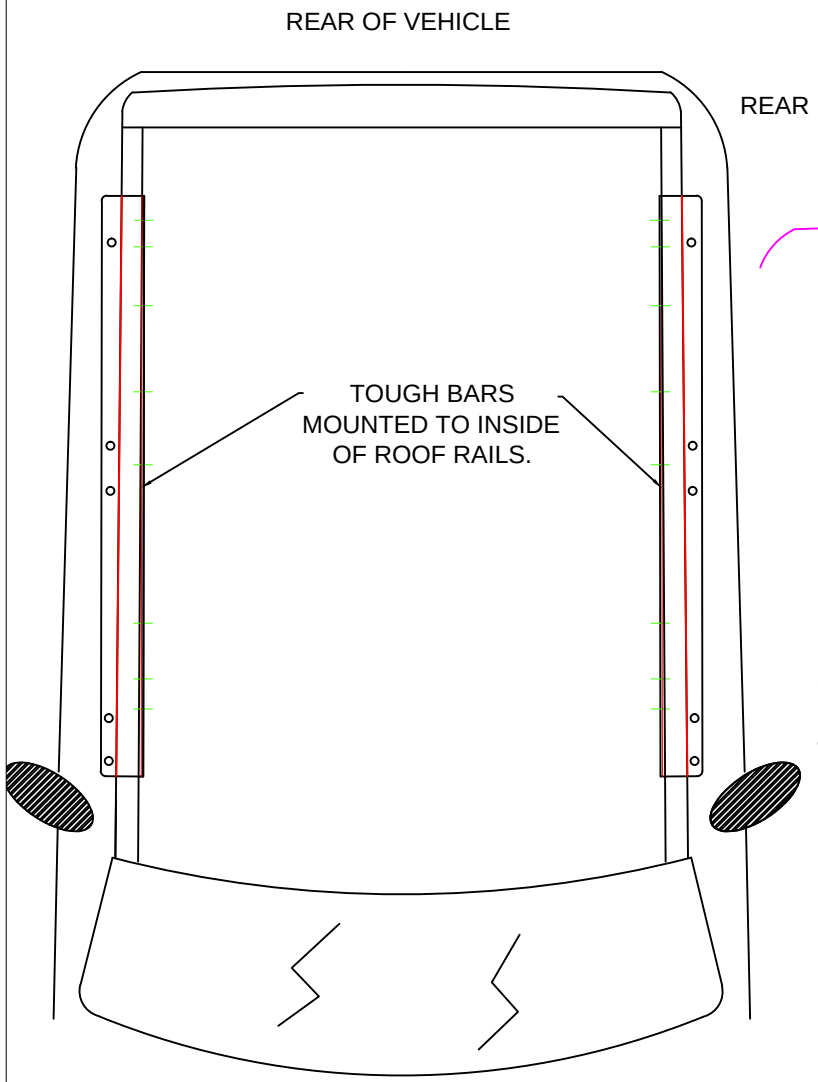

TOUGH BAR TO TLR ROOFRACK ALIGNMENT.

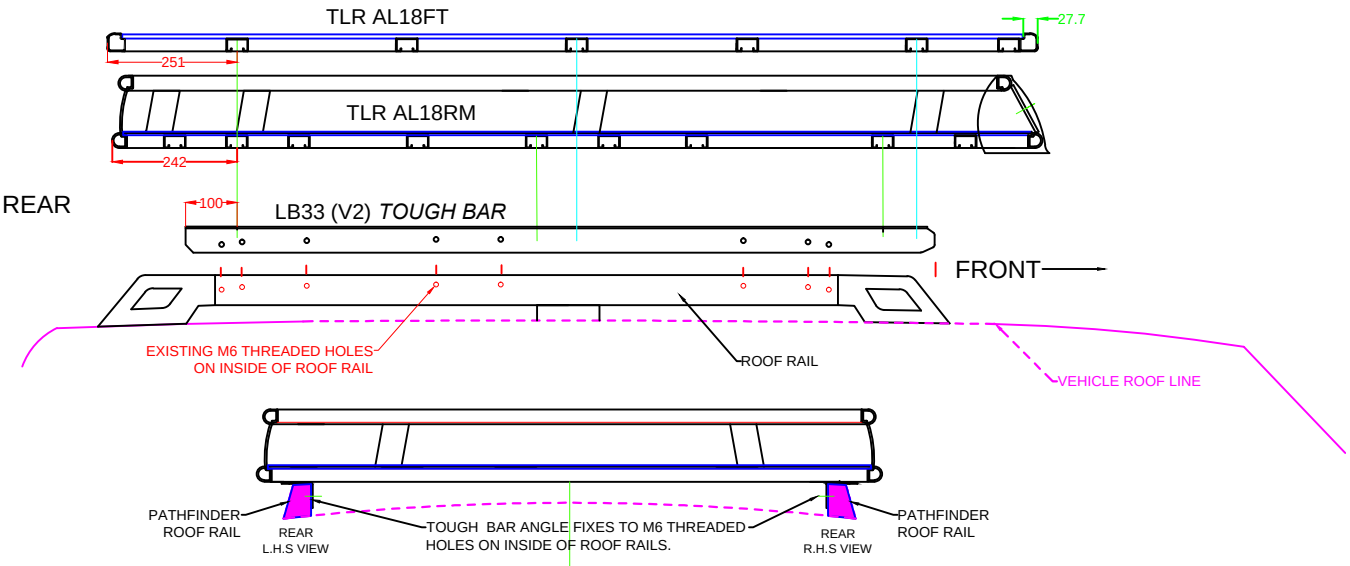

REAR VIEW

1. Fit Tough Bar to inside edge of Roof Rail and secure with M6x20 But. Set Screws, Star Washers, and Flat Washers, then tighten firmly. **NOTE: Arrow on Tough Bar faces the front of Vehicle.**
2. Fit a M10 x 25 Hex. Set Screw, Star Washer, Flat Washer and Channel Nut to each hole on the Top Side of the Tough Bar, with Channel Nut on the top side.
3. With a person either side of the Roof Rack, lift the Roof Rack over the rear of the vehicle and lower it gently onto the Tough Bar.
4. Align the Channel Cross Members with the Channel Nuts on the Tough Bar and centralise the Tracklander left to right on the vehicle.
5. Make sure the Channel Nuts rotate and lock into Channel, then tighten fasteners firmly to secure Tracklander to the Tough Bar.
6. Check the position of Roof Rack and tighten all Fasteners firmly.

NOTE: Check all Roof Rack and Tough Bar Fasteners regularly, especially after traveling over unsealed roads and rough terrain.

© JARAM AUSTRALIA 27-7-2017

UPDATED: 8-5-2023